



USB-2000 Series

USB 2.0 Full-Speed High Performance DAQ module

User's Manual

Revision History

| Revision | Date | Description of Change |
|----------|--------------|--|
| 1.09 | May 8, 2014 | <ol style="list-style-type: none">1. Adding USB-2045 Module Information2. Adding USB-2051 Module Information3. Adding USB-2055 Module Information4. Adding USB-2060 Module Information5. Adding DI API |
| 1.08 | Jan 29, 2013 | <ol style="list-style-type: none">6. Adding System API – SetAutoResetWDT |
| 1.07 | Sep 20, 2012 | <ol style="list-style-type: none">7. Adding DO API – DO_WriteValue |
| 1.06 | Jul 6, 2012 | <ol style="list-style-type: none">1. Adding DO API2. Adding information for USB-2064 |
| 1.05 | Jun 21, 2012 | <ol style="list-style-type: none">1. Modifying analog output type code |
| 1.04 | Apr 23, 2012 | <ol style="list-style-type: none">1. Changing the color of LED indicators |
| 1.03 | Dec 29, 2011 | <ol style="list-style-type: none">1. Adding information for USB-20842. Adding PI API3. Adding PI related error codes |
| 1.02 | Dec 20, 2011 | Adding ERR_USBDEV_ERROR_WRITEFILE error code |
| 1.01 | Dec 15, 2011 | Modify specification of USB-2019 |
| 1.00 | Oct 31, 2011 | First revision released |

Preface

Warranty

All products manufactured by ICP DAS are under warranty regarding defective materials for a period of one year from the date of delivery to the original purchaser.

Warning

ICP DAS assumes no liability for damages resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, or for any infringements of patents or other rights of third parties resulting from its use.

Copyright

Copyright © 2011 by ICP DAS CO., LTD. All rights are reserved.

Trademark

The names used for identification only may be registered trademarks of their respective companies.

Content

| | |
|--|-----|
| Revision History..... | i |
| Preface..... | ii |
| Content..... | iii |
| 1 Introduction..... | 1 |
| 1.1 Overview..... | 1 |
| 1.2 Feature | 1 |
| 1.3 Applications | 2 |
| 1.4 Specifications..... | 2 |
| 1.4.1 General..... | 2 |
| 1.4.2 USB-2019 | 3 |
| 1.4.3 USB-2045 | 4 |
| 1.4.4 USB-2051 | 5 |
| 1.4.5 USB-2055 | 6 |
| 1.4.6 USB-2060 | 8 |
| 1.4.7 USB-2064 | 10 |
| 1.4.8 USB-2084 | 11 |
| 1.5 Product Check List..... | 12 |
| 2 Hardware Information..... | 13 |
| 2.1 Module Overview..... | 13 |
| 2.1.1 USB-2019 | 14 |
| 2.1.2 USB-2045 & USB-2051 & USB-2055 &USB-2060 | 15 |
| 2.1.3 USB-2064 | 15 |
| 2.1.4 USB-2084 | 16 |
| 2.1.5 CA-USB15 | 16 |
| 2.2 Connector Pin Assignment | 17 |
| 2.2.1 USB-2019 | 17 |
| 2.2.2 USB-2045 | 17 |
| 2.2.3 USB-2051 | 18 |
| 2.2.4 USB-2055 | 18 |
| 2.2.5 USB-2060 | 19 |
| 2.2.6 USB-2064 | 19 |
| 2.2.7 USB-2084 | 20 |
| 2.3 Wiring | 21 |
| 2.3.1 USB-2019 | 21 |

| | |
|--|----|
| 2.3.2 USB-2045 | 21 |
| 2.3.3 USB-2051 | 21 |
| 2.3.4 USB-2055 | 22 |
| 2.3.5 USB-2060 | 23 |
| 2.3.6 USB-2064 | 23 |
| 2.3.7 USB-2084 | 24 |
| 2.4 Hardware Configuration | 25 |
| 2.4.1 Board ID | 25 |
| 2.4.2 Firmware Update | 25 |
| 2.4.3 USB-2019 | 26 |
| 2.4.4 USB-2045 | 26 |
| 2.4.5 USB-2051 | 27 |
| 2.4.6 USB-2055 | 27 |
| 2.4.7 USB-2060 | 27 |
| 2.4.8 USB-2064 | 28 |
| 2.4.9 USB-2084 | 29 |
| 2.5 LED Indicators..... | 30 |
| 2.5.1 Normal Operation | 30 |
| 2.5.2 Firmware update | 30 |
| 3 Installation..... | 31 |
| 3.1 Hardware | 31 |
| 3.1.1 Connecting to ICP DAS USB series I/O module..... | 31 |
| 3.2 Software..... | 31 |
| 3.2.1 Utility..... | 32 |
| 3.2.2 ICP DAS USB I/O Software Integration..... | 42 |
| 3.2.3 Samples | 44 |
| 4 Operation | 45 |
| 4.1 Hardware structure..... | 45 |
| 4.2 Software structure | 45 |
| 5 ICP DAS USB Class Members..... | 48 |
| 5.1 Table of Constructors | 48 |
| 5.2 Table of Static Methods | 48 |
| 5.3 Table of Public Methods | 48 |
| 5.3.1 System..... | 48 |
| 5.3.2 Device..... | 49 |
| 5.3.3 Digital Input | 49 |

| | |
|----------------------------------|-----|
| 5.3.4 Digital Output | 50 |
| 5.3.5 Analog Input..... | 50 |
| 5.3.6 Pulse Input..... | 51 |
| 5.3.7 Other..... | 52 |
| 5.4 Constructors..... | 52 |
| 5.4.1 ICPDAS_USBIO | 52 |
| 5.5 Static Methods | 53 |
| 5.5.1 ListDevice | 53 |
| 5.5.2 ScanDevice | 54 |
| 5.6 Public Methods..... | 55 |
| 5.6.1 System..... | 55 |
| 5.6.2 Device | 61 |
| 5.6.3 Digital Input | 82 |
| 5.6.4 Digital Output | 97 |
| 5.6.5 Analog Input..... | 119 |
| 5.6.6 Pulse Input..... | 157 |
| 6 Troubleshooting | 199 |
| Appendix A..... | 200 |
| A.1 Analog Input Type Code..... | 200 |
| A.2 Analog Output Type Code..... | 201 |
| A.3 Pulse Input Type Code..... | 201 |
| A.4 Channel Status..... | 201 |
| Appendix B | 202 |
| B.1 Error Codes..... | 202 |

1 Introduction

1.1 Overview

The ICP DAS USB series I/O modules are highly flexible solution for data acquisition. It provides easy USB plug-and-play operation and equips accurate measurement for all kinds of applications of automations. Compared with the traditional PC-based cards like PCI, PC/104 and ISA cards, users can achieve data acquisition easier and quicker via ICP DAS USB series I/O modules. Besides, through ICP DAS USB I/O utility, users can configure and test modules directly and easily without any coding. The friendly API library is also provided for users to develop own USB application.

1.2 Feature

- Maximum 10KS/s sampling rate
- Wide operating temperature range
- RoHS compliant
- USB 2.0 Full-Speed compliant
- No external power supply (Powered by USB)
- Plug-and-Play without driver installation
- Lockable USB cable
- Support firmware update via USB
- Utility tool for module configuration and I/O testing easily and quickly
- PWR/RUN/ERR LED indicator
- Built-in dual watchdog (hardware/software)
- Providing API Library (VC/VB/BCB/.NET)
- Module supported for Win2000/XP and Win7 (32/64 bit)

1.3 Applications

- Building automation
- Factory automation
- Machine automation
- Data acquisition and control
- Environment monitor
- Laboratory equipment and research

1.4 Specifications

1.4.1 General

| Communication | |
|-----------------------------|--|
| Interface | USB 2.0 Full-Speed |
| Watchdog | 1 Hardware watchdog (1.6 second) 1 Software watchdog (Programmable) |
| LED Indicators / Display | |
| System LED Indicators | 3 LED as Power, Run and Error |
| I/O LED Indicators | 1 LED / channel as I/O status for Digital and Pulse I/O |
| EMC | |
| ESD (IEC 61000-4-2) | 4 kV contact for each terminal |
| | 8 kV air for random point |
| EFT (IEC 61000-4-4) | 0.5kV for USB cable |
| | 0.5kV for I/O terminal |
| Environment | |
| Operating Temperature Range | -25 ~ +75°C |
| Storage Temperature Range | -40 ~ +85°C |
| Humidity | 10 ~ 95% RH, non-condensing |

1.4.2 USB-2019



The USB-2019 is an 8-channel universal analog input module. It supports the over-voltage protection of up to 240Vrms. In addition, it has voltage and current input types. It also widely supports thermocouple devices with J, K, T, E, R, S, B, N, C, L, M and L_{DIN43710} types. Moreover, it provides extremely accurate thermocouple measurement and automatically cold-junction compensation for each channel. Finally, it features open wire detection for thermocouple and 4 ~ 20 mA inputs for each channel.

| Analog Input | | |
|--|--------------|--|
| Channels | | 8 differential |
| Input Type | Voltage | ±15 mV, ±50 mV, ±100 mV, ±150 mV, ±500 mV, ±1 V, ±2.5 V, ±5 V, ±10 V |
| | Current | ±20 mA, 0 ~ +20 mA, +4 ~ +20 mA (Note : An external resistor is required) |
| | Thermocouple | J, K, T, E, R, S, B, N, C, L, M and L _{DIN43710} |
| Resolution | | 16 bit |
| Accuracy | | ±0.1% FSR |
| Sampling Rate | | 10 Hz (Total) |
| Zero Drift | | ±20 μV/°C |
| Span Drift | | ±25 ppm/°C |
| Common Mode Rejection | | 86 dB |
| Normal Mode Rejection | | 100 dB |
| Input Impedance | Voltage | > 400 kΩ |
| | Current | 125Ω (External resistor is required) |
| Intra-Module Isolation, Field-to-Logic | | 3000 V _{DC} |
| Overvoltage protection | | 240 V _{rms} |
| Individual Channel Configuration | | Yes |
| Open Wire Detection | | Yes (Software programmable) |
| Power | | |
| Power Consumption | | 1.45W maximum |
| Mechanical | | |
| Dimensions (W×L×H) | | 33mm × 119mm × 107mm |

1.4.3 USB-2045



The USB-2045 is a full-speed USB device with 16 digital output channels module. The USB-2045 supports source type output and equips with short circuit protection. There are 16 LED indicators that can be used to monitor the status of the digital output channels. The 4 kV ESD protection, 4 kV EFT protection, 3 kV surge protection for power input and 3750 VDC Intra-module isolation are standard.

| Digital Output | |
|------------------------|--------------------------------------|
| Channels | 16 |
| Type | Open Collector, Sink (NPN) |
| Load Voltage | +3.5~+50VDC |
| Max. Load Current | 650 mA/Channel |
| Overvoltage Protection | 60 VDC |
| Overload Protection | 1.4A (with short-circuit protection) |
| Power-on Value | Yes |
| Safe Value | Yes |
| Power | |
| Power Consumption | 1.0 W max. |
| Mechanical | |
| Dimensions (W×L×H) | 72 mm x 123 mm x 35 mm |

1.4.4 USB-2051



The USB-2051 is a full-speed USB device with 16 digital input channels module. The USB-2051 offers 16 channels for digital input, catering for both dry and wet contact, with an effective distance for dry contact of up to 500 meters. All channels not only feature photocouple isolation, but can also be used as 16-bit counters. The USB-2051 has 16 LED indicators that can be used to monitor the status of the digital input channels. 4 kV ESD protection and 3750 VDC intra-module isolation are standard.

| Digital Input | | |
|------------------------------------|----------------------|------------------------|
| Channels | | 16 |
| Type | Dry Contact | Source |
| | Wet Contact | Sink/Source |
| On Voltage Level | Dry Contact | Close to GND |
| | Wet Contact | +10 VDC ~ +50 VDC |
| Off Voltage Level | Dry Contact | Open |
| | Wet Contact | +4 VDC Max. |
| Effective Distance For Dry Contact | | 500 meters Max. |
| Input Impedance | | 10 K Ω |
| Overvoltage Protection | | 70 VDC |
| Counter | Max. Count | 65535 (16-bit) |
| | Max. Input Frequency | 500 Hz |
| | Min. Pulse Width | 1 ms |
| Power | | |
| Power Consumption | | 1.03 W max. |
| Mechanical | | |
| Dimensions (W×L×H) | | 72 mm x 123 mm x 35 mm |

1.4.5 USB-2055



The USB-2055 is a full-speed USB device with 8 digital input and digital output channels module. The USB-2055 offers 8 isolated channels for digital input and 8 isolated channels for digital output. Either sink-type or source-type digital input can be selected via wire connections. All digital input channels are also able to be used as 16-bit counters. The USB-2055 supports source-type output with short circuit protection. There are options to enable both power-on and safety values. The USB-2055 has 16 LED indicators that can be used to monitor the status of the digital input and digital output channels. 4 kV ESD protection and 3750 VDC intra-module isolation are standard.

| Digital Input | | |
|------------------------------------|----------------------|--------------------------------------|
| Channels | | 8 |
| Type | Dry Contact | Source |
| | Wet Contact | Sink/Source |
| On Voltage Level | Dry Contact | Close to GND |
| | Wet Contact | +10 VDC ~ +50 VDC |
| Off Voltage Level | Dry Contact | Open |
| | Wet Contact | +4 VDC Max. |
| Effective Distance For Dry Contact | | 500 meters Max. |
| Input Impedance | | 10 K Ω |
| Overvoltage Protection | | 70 VDC |
| Counter | Max. Count | 65535 (16-bit) |
| | Max. Input Frequency | 500 Hz |
| | Min. Pulse Width | 1 ms |
| Digital Output | | |
| Channels | | 8 |
| Type | | Open Collector, Sink (NPN) |
| Load Voltage | | +3.5~+50VDC |
| Max. Load Current | | 650 mA/Channel |
| Overvoltage Protection | | 60 VDC |
| Overload Protection | | 1.4A (with short-circuit protection) |

| | |
|----------------------|---------------------|
| Power-on Value | Yes |
| Safe Value | Yes |
| Power | |
| Power Consumption | 1.2 W max. |
| Mechanical | |
| Dimensions (W×L×H) | 33mm × 87mm × 107mm |

1.4.6 USB-2060



The USB-2060 is a full-speed USB device with 8 digital input and digital output channels module. The USB-2060 provides 6 digital input channels, 6 Form A signal relay output channels. All digital input channels can be used as 16-bit counters. In addition, the digital input channels can be selected either as sink or source type via wire connections. The USB-2060 also provides 12 LED indicators that can be used to monitor the status of the digital input and relay output. There are also options for configuring power-on and safe values. 4 kV ESD protection and 3750 VDC intra-module isolation are also provided to enhance noise protection capabilities in industrial environments.

| Digital Input | | |
|------------------------------------|----------------------|---------------------------------|
| Channels | | 6 |
| Type | Dry Contact | Source |
| | Wet Contact | Sink/Source |
| On Voltage Level | Dry Contact | Close to GND |
| | Wet Contact | +10 VDC ~ +50 VDC |
| Off Voltage Level | Dry Contact | Open |
| | Wet Contact | +4 VDC Max. |
| Effective Distance For Dry Contact | | 500 meters Max. |
| Input Impedance | | 10 K Ω |
| Overvoltage Protection | | 70 VDC |
| Counter | Max. Count | 65535 (16-bit) |
| | Max. Input Frequency | 500 Hz |
| | Min. Pulse Width | 1 ms |
| Relay Output | | |
| Channels | | 6 |
| Output Type | | Form A (SPST-NO) |
| Contact Rating (Resistive Load) | DC | 5A 30V _{DC} |
| | AC | 5A 250V _{AC} (47~63Hz) |
| Operate Time | | 10ms max. |
| Release Time | | 5ms max. |

| | | |
|-----------------------|--------------------------|--|
| Insulation Resistance | | 1,000 M Ω at 500V _{DC} |
| Dielectric Strength | Between Open Contact | 1000V _{AC} (1 min.) |
| | Between Coil and Contact | 3000V _{AC} (1 min.) |
| Endurance | Mechanical | 2 x 10 ⁷ ops |
| | Electrical | 1 x 10 ⁵ ops |
| Power-on Value | | Yes |
| Safe Value | | Yes |
| Power | | |
| Power Consumption | | 1.3 W max. |
| Mechanical | | |
| Dimensions (W×L×H) | | 33mm × 87mm × 107mm |

1.4.7 USB-2064



The USB-2064 is an 8-channel power relay output module with the USB interface. It provides a maximum 5A driving load current for variety applications. In addition, This module also provides the safety functionality to secure devices in the field. Besides, it also supports power-on configuration to customize initial state.

| Relay Output | | |
|---------------------------------|---|------------------------------|
| Channels | 8 | |
| Output Type | Form A (SPST-NO) | |
| Contact Rating (Resistive Load) | 5A 250V _{AC} (47~63Hz) 5A 30V _{DC} | |
| Operate Time | 10ms max. | |
| Release Time | 5ms max. | |
| Insulation Resistance | 1,000 MΩ at 500V _{DC} | |
| Dielectric Strength | Between Open Contact | 1000V _{AC} (1 min.) |
| | Between Coil and Contact | 3000V _{AC} (1 min.) |
| Endurance | Mechanical | 20,000,000 times min. |
| | Electrical | 100,000 times min. |
| Power Consumption | 1.235W max. | |
| Mechanical | | |
| Dimensions (W×L×H) | 33mm × 87mm × 107mm | |

1.4.8 USB-2084



The USB-2084 is an 8-channel counters module with the USB interface. It provides a variety of measurement applications, such as measuring a number of time-related quantities, counting events or totalizing, and monitoring position with quadrature encoders. In addition, a digital filter is used to eliminate the effects of noise, and the filter's parameters are adjustable by software.

| Counter | | |
|--|--|---|
| Channels | 4 channel counter type Up/Down | |
| | 4 channel counter type Dir/Pulse | |
| | 4 channel counter type A/B Phase | |
| | 8 channels for counter type Up and Frequency | |
| Input Type | Up, Frequency, Up/Down, Dir/Pulse, A/B Phase | |
| Resolution | 32 bit | |
| Input Frequency | 500kHz maximum | |
| Digital Noise Filter | 1~32767uS (Software programmable) | |
| Frequency Accuracy | ±0.4% | |
| Isolated Input Level | On Voltage Level | +4.5V _{DC} ~+30V _{DC} |
| | Off Voltage Level | +1V _{DC} maximum |
| Non-isolated Input Level | On Voltage Level | +2V _{DC} ~+5V _{DC} |
| | Off Voltage Level | 0V _{DC} ~+0.8V _{DC} |
| Intra-Module Isolation, Field-to-Logic | 2500 V _{DC} | |
| Individual Channel Configuration | Yes | |
| Power Consumption | 1.11W maximum | |
| Mechanical | | |
| Dimensions (W×L×H) | 33mm × 102mm × 107mm | |

1.5 Product Check List

The package includes the following items:


- One ICP DAS USB I/O module
- One Quick Start Guide
- One USB cable with lockable kit (CA-USB15)

It is highly recommended to read the Quick Start Guide first before using ICP DAS USB I/O modules. There is some useful information in the Quick Start Guide:

- How to install hardware and use utility

2 Hardware Information

2.1 Module Overview

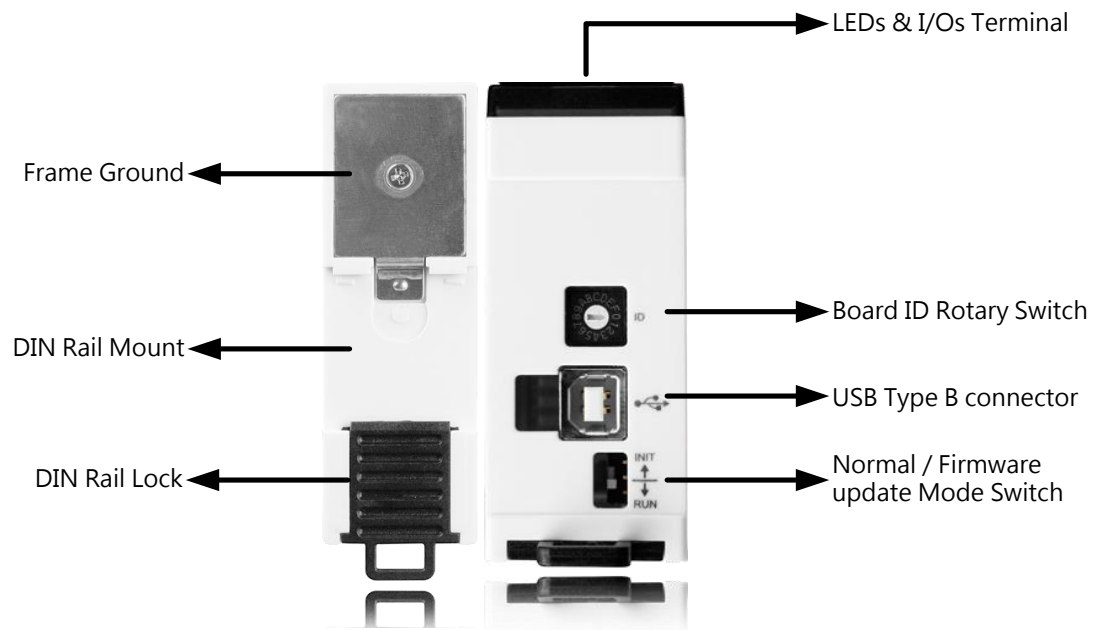

Board ID Rotary Switch


0 : User defined (Software Programmable)
1 ~ 15 : Fix board ID

Normal / Firmware Update Mode Switch

INIT : Firmware update mode
RUN : Normal mode


2.1.1 USB-2019

2.1.1.1 Body

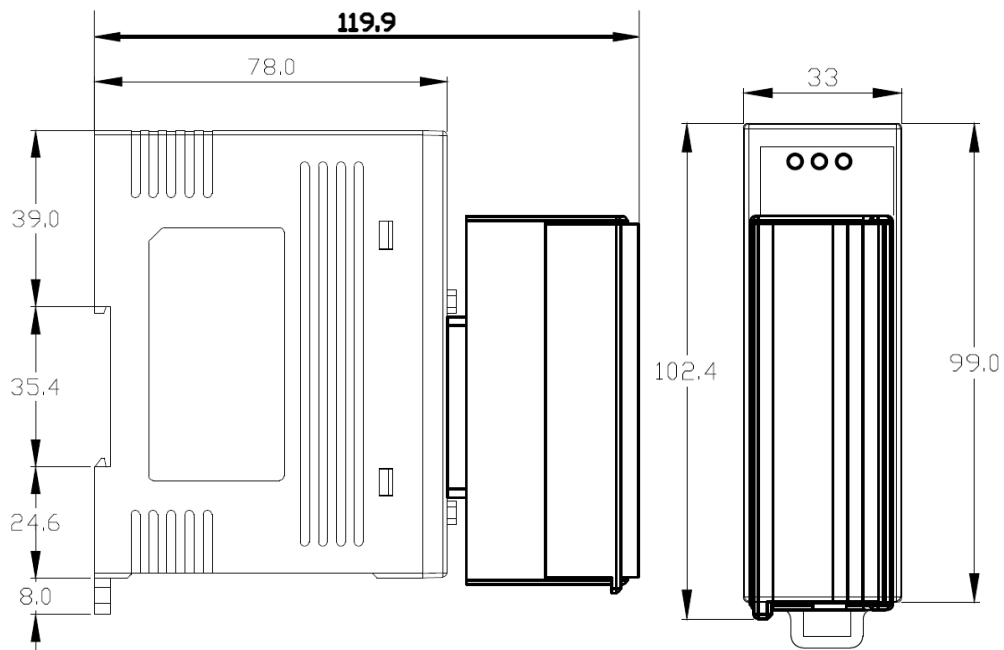


2.1.1.2 CN-1824

The CN-1824 is a connector transfers DB-25 connector to 18-pin terminal block to help user to wire. The dimension is shown as follow.

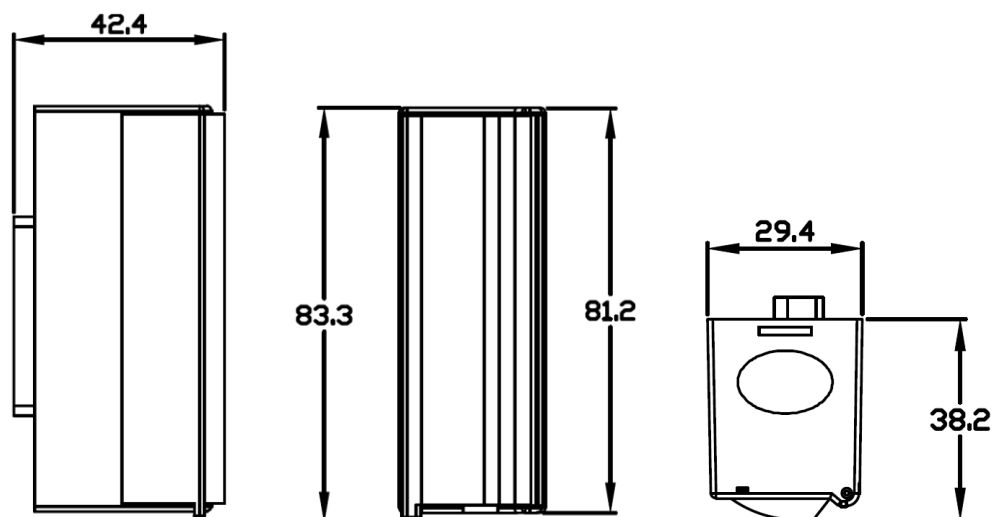

2.1.2 USB-2045 & USB-2051 & USB-2055 & USB-2060

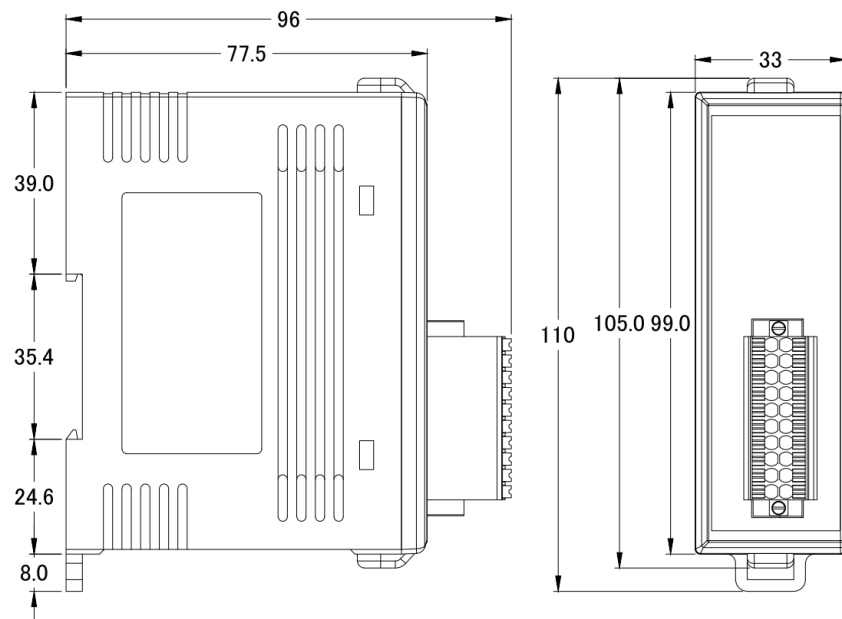

2.1.3 USB-2064

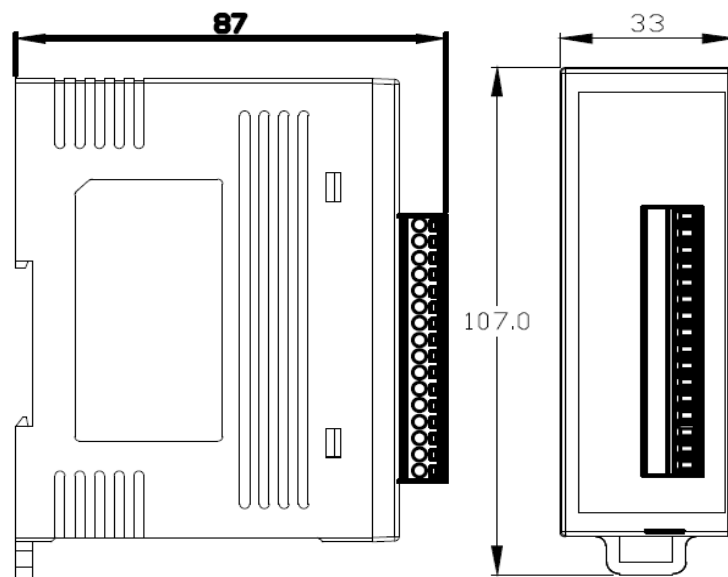


Figure 2-1, Figure 2-2 The USB-2084 left and front side view

2.1.4 USB-2084

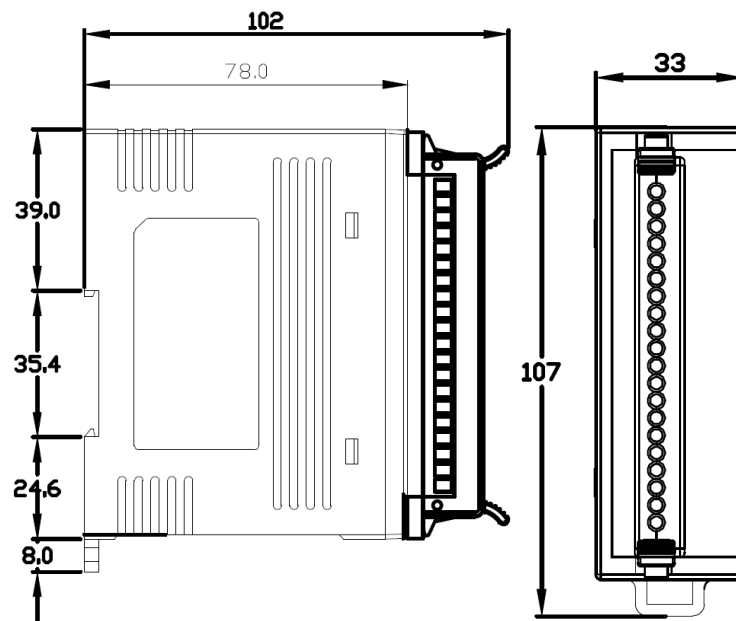


Figure 2-3, Figure 2-4 The USB-2084 left and front side view

2.1.5 CA-USB15



2.2 Connector Pin Assignment

2.2.1 USB-2019

| Pin Assignment | Terminal | No. | Pin Assignment | Pin Assignment Name |
|----------------|----------|--------|----------------|---------------------|
| +5V | 01 | 14 | AGND | CH 0+ |
| CJC | 02 | 15 | CH 0+ | CH 0- |
| CH 0- | 03 | 16 | CH 1+ | CH 1+ |
| CH 1- | 04 | 17 | CH 2+ | CH 1- |
| CH 2- | 05 | 18 | CH 3+ | CH 2+ |
| CH 3- | 06 | 19 | CH 4+ | CH 2- |
| CH 4- | 07 | 20 | CH 5+ | CH 3+ |
| CH 5- | 08 | 21 | CH 6+ | CH 3- |
| CH 6- | 09 | 22 | CH 7+ | CH 4+ |
| CH 7- | 10 | 23 | N.C. | CH 4- |
| N.C. | 11 | 24 | N.C. | CH 5+ |
| N.C. | 12 | 25 | N.C. | CH 5- |
| N.C. | 13 | | N.C. | CH 6+ |
| | | Shield | F.G. | CH 6- |
| | | | | CH 7+ |
| | | | | CH 7- |
| | | | | AGND |
| | | | | AGND |

25-pin Female D-Sub Connector

| Signal | Description |
|--------|--|
| AGND | Analog input ground |
| CH(N)+ | Analog input channel N positive reference. |
| CH(N)- | Analog input channel N negative reference. |


2.2.2 USB-2045

| Pin Assignment | Terminal No. | Pin Assignment |
|----------------|--------------|----------------|
| Ext.GND | 1 | 11 Ext.GND |
| DO0 | 2 | 12 DO8 |
| DO1 | 3 | 13 DO9 |
| DO2 | 4 | 14 DO10 |
| DO3 | 5 | 15 DO11 |
| DO4 | 6 | 16 DO12 |
| DO5 | 7 | 17 DO13 |
| DO6 | 8 | 18 DO14 |
| DO7 | 9 | 19 DO15 |
| Ext.PWR | 10 | 20 Ext.PWR |

| Signal | Description |
|---------|--------------------------------------|
| DO(N) | The Digital Output for Channel N |
| Ext.PWR | The Power Source Input Pin |
| Ext.GND | The Ground of Power Source Input Pin |

2.2.3 USB-2051


| Pin Assignment | Terminal No. | Pin Assignment |
|----------------|--------------|----------------|
| Ext.GND | 1 | Ext.GND |
| DO0 | 2 | DO8 |
| DO1 | 3 | DO9 |
| DO2 | 4 | DO10 |
| DO3 | 5 | DO11 |
| DO4 | 6 | DO12 |
| DO5 | 7 | DO13 |
| DO6 | 8 | DO14 |
| DO7 | 9 | DO15 |
| Ext.PWR | 10 | Ext.PWR |



| Signal | Description |
|--------|---|
| DI(N) | The Digital Input for Channel N |
| DI.GND | The Ground of Current Path of Dry Contact |
| DI.COM | The Common Pin for Wet Contact |

2.2.4 USB-2055


| Pin Assignment | Terminal No. | Pin Assignment |
|----------------|--------------|----------------|
| Ext.GND | 1 | DI.GND |
| DO0 | 2 | DI0 |
| DO1 | 3 | DI1 |
| DO2 | 4 | DI2 |
| DO3 | 5 | DI3 |
| DO4 | 6 | DI4 |
| DO5 | 7 | DI5 |
| DO6 | 8 | DI6 |
| DO7 | 9 | DI7 |
| Ext.PWR | 10 | DI.COM |



| Signal | Description |
|---------|---|
| DI(N) | The Digital Input for Channel N |
| DI.GND | The Ground of Current Path of Dry Contact |
| DI.COM | The Common Pin for Wet Contact |
| DO(N) | The Digital Output for Channel N |
| Ext.PWR | The Power Source Input Pin |
| Ext.GND | The Ground of Power Source Input Pin |

2.2.5 USB-2060


| Pin Assignment | Terminal No. | Pin Assignment |
|----------------|--------------|----------------|
| RL0 NO | 1 | DI.GND |
| RL0 COM | 2 | DI0 |
| RL1 NO | 3 | DI1 |
| RL1 COM | 4 | DI2 |
| RL2 NO | 5 | DI3 |
| RL2 COM | 6 | DI4 |
| RL3 NO | 7 | DI5 |
| RL3 COM | 8 | DI.COM |
| RL4 NO | 9 | RL5 NO |
| RL4 COM | 10 | RL5 COM |



| Signal | Description |
|-----------|---|
| DI(N) | The Digital Input for Channel N |
| DI.GND | The Ground of Current Path of Dry Contact |
| DI.COM | The Common Pin for Wet Contact |
| RL(N) NO | The NO pin of relay(N) |
| RL(N) COM | The COM pin of relay(N) |





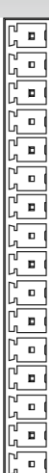














 
2.2.6 USB-2064

| Terminal No. | Pin Assignment |
|--------------|----------------|
| 01 | RL0 NO |
| 02 | RL0 COM |
| 03 | RL1 NO |
| 04 | RL1 COM |
| 05 | RL2 NO |
| 06 | RL2 COM |
| 07 | RL3 NO |
| 08 | RL3 COM |
| 09 | RL4 NO |
| 10 | RL4 COM |
| 11 | RL5 NO |
| 12 | RL5 COM |
| 13 | RL6 NO |
| 14 | RL6 COM |
| 15 | RL7 NO |
| 16 | RL7 COM |



| Signal | Description |
|-----------|-------------------------|
| RL(N) NO | The NO pin of relay(N) |
| RL(N) COM | The COM pin of relay(N) |




2.2.7 USB-2084

| Terminal No. | Pin Assignment |
|---|----------------|
|  01 | C0A+ |
|  02 | C0A- |
|  03 | C0B+ |
|  04 | C0B- |
|  05 | C1A+ |
|  06 | C1A- |
|  07 | C1B+ |
|  08 | C1B- |
|  09 | C2A+ |
|  10 | C2A- |
|  11 | C2B+ |
|  12 | C2B- |
|  13 | C3A+ |
|  14 | C3A- |
|  15 | C3B+ |
|  16 | C3B- |
|  17 | GND |
|  18 | GND |
|  19 | N.C |
|  20 | N.C |





| Signal | Description |
|--------|--|
| GND | Ground pin for non-isolated connection |
| C(N)A+ | Counter positive signal channel for pair A |
| C(N)A- | Counter negative signal channel for pair A |
| C(N)B+ | Counter positive signal channel for pair B |
| C(N)B- | Counter negative signal channel for pair B |
| N.C | No connection on this pin |

2.3 Wiring

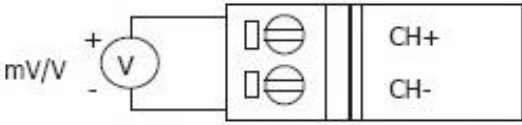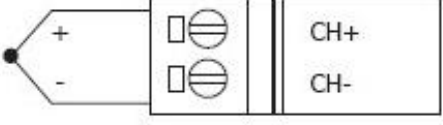
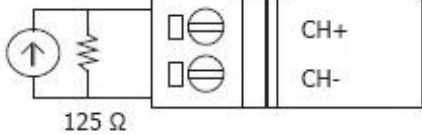

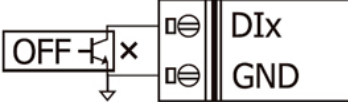
2.3.1 USB-2019





| Voltage Input | Thermocouple Input |
|--|--|
|  |  |
| Current Input | |
|  <p>Note: When connecting to current source, an external 125Ω resistor is required.</p> | |

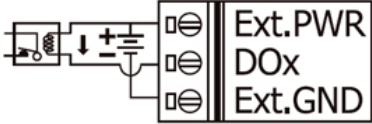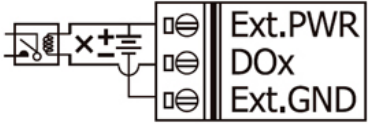2.3.2 USB-2045

| Output | ON | OFF |
|-----------------|---|--|
| Drive Relay |  |  |
| Resistance Load |  |  |







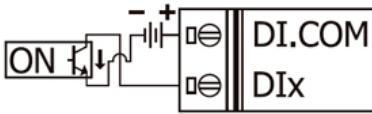
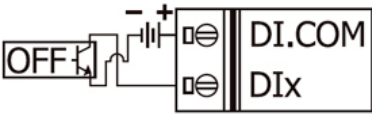
2.3.3 USB-2051
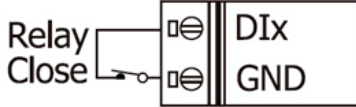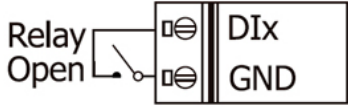
| Input | ON | OFF |
|----------------------|---|--|
| Relay Contact (Dry) |  |  |
| Open Collector (Dry) |  |  |

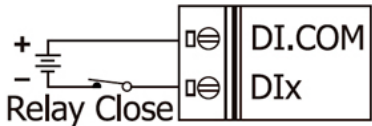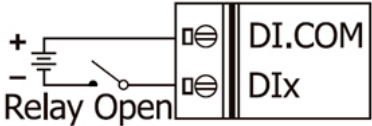
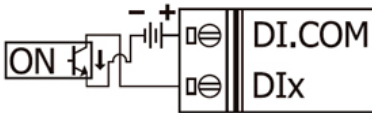
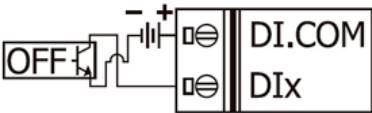

| | | |
|------------------------|---|--|
| Relay Contact (Wet) |  |  |
| NPN Output (Wet) |  |  |

2.3.4 USB-2055

Digital Input

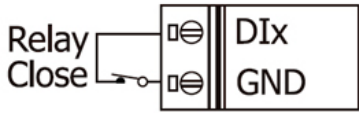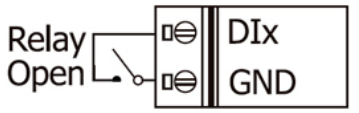
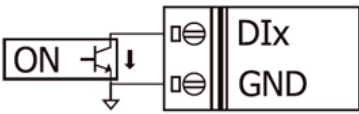
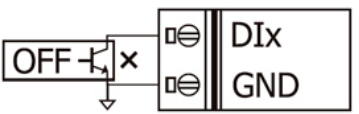
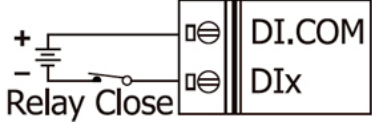




| Input | ON | OFF |
|-------------------------|---|--|
| Relay Contact (Dry) |  |  |
| Open Collector (Dry) |  |  |
| Relay Contact (Wet) |  |  |
| NPN Output (Wet) |  |  |

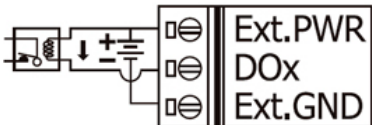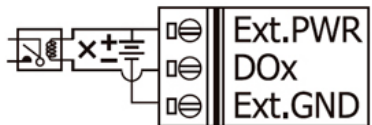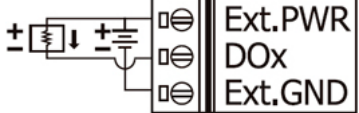Digital Output



| Output | ON | OFF |
|--------------------|---|--|
| Drive Relay |  |  |
| Resistance Load |  |  |

2.3.5 USB-2060

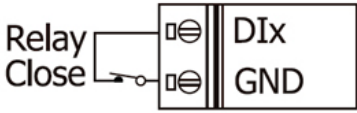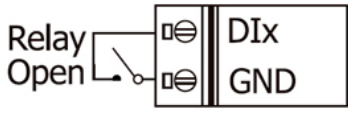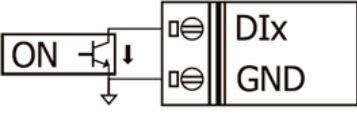
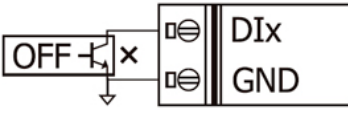
Digital Input
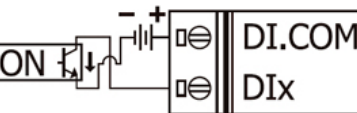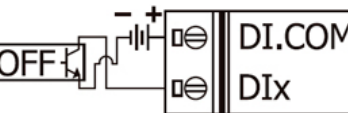
| Input | ON | OFF |
|----------------------|--|---|
| Relay Contact (Dry) |  |  |
| Open Collector (Dry) |  |  |
| Relay Contact (Wet) |  |  |
| NPN Output (Wet) |  |  |



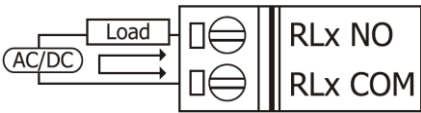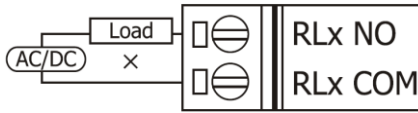



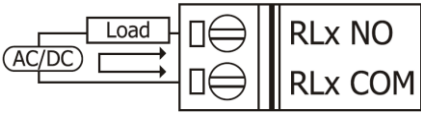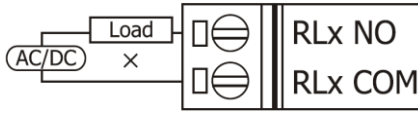




























Relay Output

| Output Type | ON State LED ON Readback as 1 | OFF State LED OFF Readback as 0 |
|---------------|---|--|
| Relay Contact |  |  |

2.3.6 USB-2064

| Output Type | ON State LED ON Readback as 1 | OFF State LED OFF Readback as 0 |
|---------------|---|--|
| Relay Contact |  |  |

2.3.7 USB-2084

| Input Mode | Isolated | Non-isolated |
|-----------------------------|--|---|
| Dir/Pulse | Vin+ (Pulse) —  CxA+ Vin- (Pulse) —  CxA- Vin+ (Dir) —  CxB+ Vin- (Dir) —  CxB- | Vin+ (Pulse) —  CxA+ Vin+ (Dir) —  CxB+ Vin- (Pulse) and Vin- (Dir) —  GND |
| Up/Down | Vin+ (Up) —  CxA+ Vin- (Up) —  CxA- Vin+ (Down) —  CxB+ Vin- (Down) —  CxB- | Vin+ (Up) —  CxA+ Vin+ (Down) —  CxB+ Vin- (Up) and Vin- (Down) —  GND |
| Up | Vin+ (Up0) —  CxA+ Vin- (Up0) —  CxA- Vin+ (Up1) —  CxB+ Vin- (Up1) —  CxB- | Vin+ (Up0) —  CxA+ Vin+ (Up1) —  CxB+ Vin- (Up0) and Vin- (Up1) —  GND |
| A/B Phase (Quadrant) | Vin+ (A0) —  CxA+ Vin- (A0) —  CxA- Vin+ (B0) —  CxB+ Vin- (B0) —  CxB- | Vin+ (A0) —  CxA+ Vin+ (B0) —  CxB+ Vin- (A0) and Vin- (B0) —  GND |
| Frequency | Vin+ (Freq0) —  CxA+ Vin- (Freq0) —  CxA- Vin+ (Freq1) —  CxB+ Vin- (Freq1) —  CxB- | Vin- (Freq0) —  CxA+ Vin- (Freq1) —  CxB+ Vin- (Freq0) and Vin- (Freq1) —  GND |

2.4 Hardware Configuration

The ICP DAS USB series I/O modules provide two basic configurations of hardware to configure board ID and enable firmware update functionality.

2.4.1 Board ID

The board ID is used to identify two modules with same product number connected to computer. When two more modules with same product number are connected, each of them must be set to different board ID to prevent conflict and unexpected errors. The board ID can be configured by the rotary switch. The location of the rotary switch is shown in figure 2-15. The value of board ID can be configured from 1 ~ 15 by hardware, and can be configured from 16 ~ 127 by software when switched to 0.

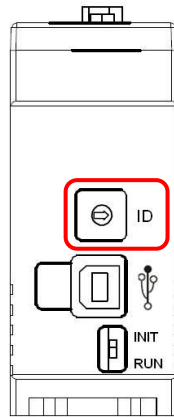


Figure 2-5 The hardware setting for board ID

2.4.2 Firmware Update

The ICP DAS USB series I/O modules provide firmware updateable functionality. Users can update firmware if latest firmware released. The switch setting is shown in figure 2-16. The INIT side of the switch means firmware update mode, run side means normal operation.

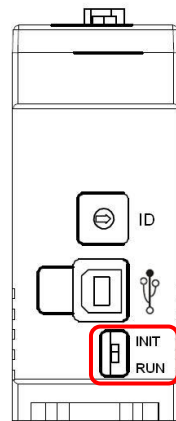


Figure 2-6 The hardware setting for enabling firmware update functionality

2.4.3 USB-2019

2.4.3.1 Hardware Watchdog

The USB-2019 has a build-in hardware watchdog. It is recommended to enable this functionality. The hardware watchdog can be set by jumper JP1. The watchdog setting is enabled by default.

| Jumper | | Setting | |
|--------|---------------------|---------|---------|
| JP1 | Enable (Default) | | Disable |
| | | | |

2.4.4 USB-2045

2.4.4.1 Hardware Watchdog



The USB-2045 has a build-in hardware watchdog. It is recommended to enable this functionality. The hardware watchdog can be set by jumper JP1. The watchdog setting is enabled by default.

| Jumper | | Setting | |
|--------|---------------------|---------|---------|
| JP1 | Enable (Default) | | Disable |
| | | | |

2.4.5 USB-2051

2.4.5.1 Hardware Watchdog



The USB-2051 has a build-in hardware watchdog. It is recommended to enable this functionality. The hardware watchdog can be set by jumper JP1. The watchdog setting is enabled by default.
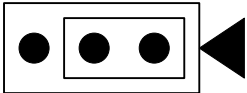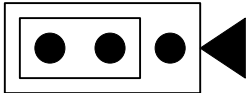
| Jumper | | Setting | |
|--------|---------------------|---|---|
| JP1 | Enable (Default) |  | Disable  |

2.4.6 USB-2055

2.4.6.1 Hardware Watchdog



The USB-2055 has a build-in hardware watchdog. It is recommended to enable this functionality. The hardware watchdog can be set by jumper JP1. The watchdog setting is enabled by default.
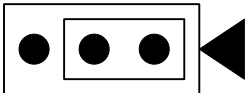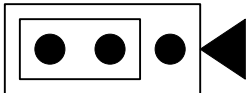
| Jumper | | Setting | |
|--------|---------------------|---|---|
| JP1 | Enable (Default) |  | Disable  |

2.4.7 USB-2060

2.4.7.1 Hardware Watchdog



The USB-2060 has a build-in hardware watchdog. It is recommended to enable this functionality. The hardware watchdog can be set by jumper JP1. The watchdog setting is enabled by default.
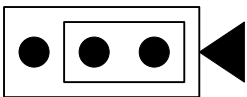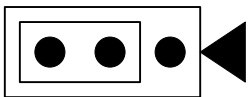
| Jumper | | Setting | |
|--------|---------------------|---|---|
| JP1 | Enable (Default) |  | Disable  |

2.4.8 USB-2064

2.4.8.1 Hardware Watchdog



The USB-2064 has a build-in hardware watchdog. It is recommended to enable this functionality. The hardware watchdog can be set by jumper JP1. The watchdog setting is enabled by default.
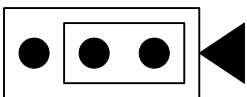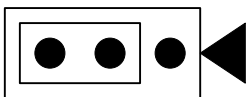
| Jumper | | Setting | |
|--------|---------------------|---|---|
| JP1 | Enable (Default) |  | Disable  |

2.4.9 USB-2084



2.4.9.1 Hardware Watchdog

The USB-2084 has build-in hardware watchdog. It is recommended to enable this functionality. The hardware watchdog can be set by jumper JP1. The watchdog setting is enabled by default.
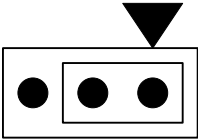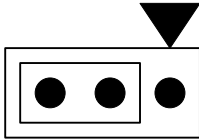
| Jumper | | Setting | |
|--------|---------------------|---|---------|
| JP1 | Enable (Default) |  | Disable |
| | |  | |

2.4.9.2 Isolated/Non-isolated (TTL)

The USB-2084 has two kind of inputs, isolated and non-isolated (TTL), for different input signals. Users can switch jumper setting on the USB-2084 board for appropriate signal. These jumpers are located within JP4~JP11. The jumper settings are listed in the following table. The isolated input is set by default.
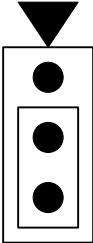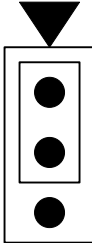
| Jumper | Counter | Jumper setting | | | |
|--------|---------|-----------------------------|---|-----------------------------------|---|
| JP4 | A0 | Isolated input (Default) |  | Non-isolated input (TTL input) |  |
| JP5 | B0 | | | | |
| JP6 | A1 | | | | |
| JP7 | B1 | | | | |
| JP8 | A2 | | | | |
| JP9 | B2 | | | | |
| JP10 | A3 | | | | |
| JP11 | B3 | | | | |

2.5 LED Indicators

The ICP DAS USB series I/O modules have two modes, normal and firmware update, are described in previous section. Each mode has own LED way of indication. The LED indications for two modes are shown below.

2.5.1 Normal Operation

| LED Indicators | LED Status | Causes |
|----------------|-----------------------|---|
| PWR (Red) | Blink | HW WDT triggered |
| | Solid | Normal Operation |
| | Off | Power Off |
| RUN (Green) | Blink | USB Bus Communicating |
| | Off | USB Bus Idle |
| ERR (Yellow) | Blink (Less frequent) | Warning (Does not affect the operation) |
| | Blink | Minor Error (Does not affect the operation) |
| | Solid | Major Error (Does affect the operation) |
| | Off | No Error |

2.5.2 Firmware update


| LED Indicators | LED Status | Causes |
|----------------|------------|--------------------------------|
| ALL | Blink | Waiting for Firmware to update |

3 Installation

3.1 Hardware

3.1.1 Connecting to ICP DAS USB series I/O module


1. Turning on the PC you are preparing to configure ICP DAS USB I/O modules.
2. Connecting the ICP DAS USB series I/O modules to USB port on the PC.
3. Once you first time connect the USB I/O module to PC. There will be few messages in system bar in bottom right side to inform new hardware is detected and installed successfully. After the message is shown as figure 3-2, then the ICP DAS USB series I/O modules are ready to use.

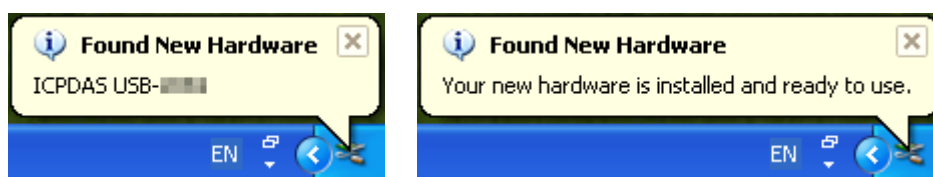

***NOTE:** It is strongly recommended that users use the cable we provided to connect to USB I/O.

3.2 Software

The software installer includes libraries, samples and Utility, and can be found in web site. You can install the package by double clicking the file "ICPDAS USB IO X.X.X.exe" . Then follow the instruction during installation.

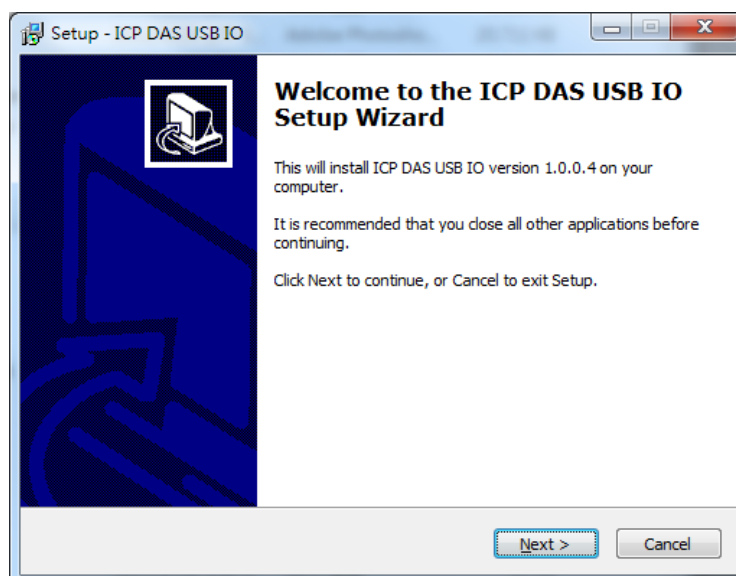

After the installation, the window will indicate the installation has completed as the figure below. Users can check or ignore the patch note in this step.




3.2.1 Utility

The USB IO Utility provides a simple way to test and acquire data easily and instantly for all ICP DAS USB series I/O modules without programming. You will find this program in "Start\Programs\ICPDAS\USB IO\USB IO Utility" or the path "C:\ICPDAS\USB IO\USB IO Utility\USB IO Utility.exe".

When users open USB IO Utility, the all ICP DAS USB series I/O modules connected to PC are listed in "Device List" as figure 3-5. The utility will scan the ICP DAS USB series

I/O modules automatically. The module in the “Device List” will be removed when pull-off from PC and added when plug-in to PC.

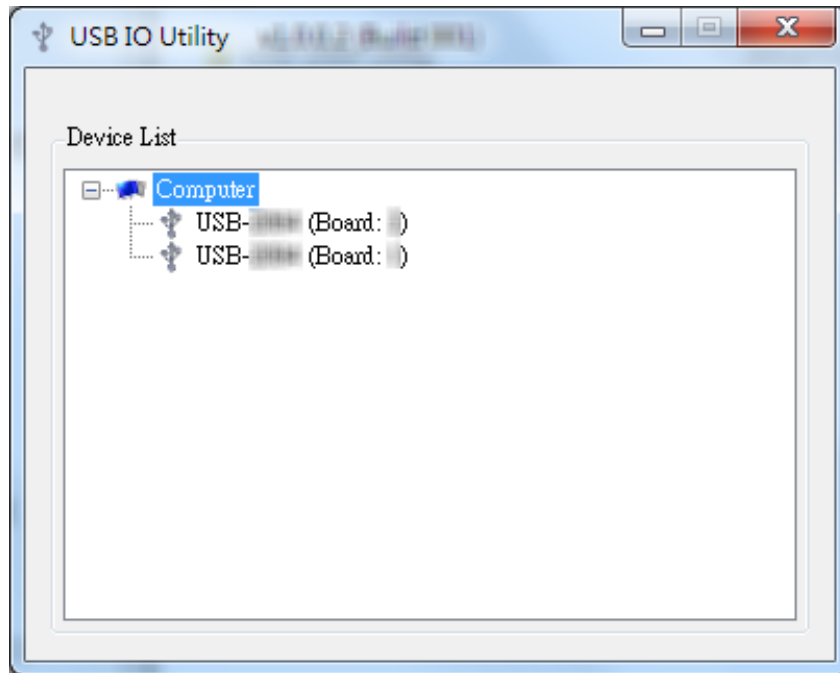

To access the ICP DAS USB I/O module user can double click the module listed in “Device List”, and then you will see another form come out. There are several function pages, information and I/O pages, in the device form. In the information page of the device form, it is used to configure basic system parameters. And in the I/O page, it is used to access I/O data and configure parameters. There will be a data log page if module supports this functionality.


3.2.1.1 Information Page

The screenshot shows a software interface with two tabs: 'Information' and 'Device Log'. The 'Information' tab is active. It contains two main sections: 'Device' and 'Setting'. The 'Device' section has two text input fields: 'Device Name' (containing '100-0000 (Board 1)') and 'Firmware Version' (containing '1.00'). The 'Setting' section has three rows of controls. The first row is 'User defined Board ID' with a numeric input box (showing '0'), up/down arrows, and a 'Set' button. The second row is 'Software WDT' with a checked 'Enable' checkbox, a numeric input box (showing '100'), the unit 'ms', and a 'Set' button. The third row is 'Description' with a text input box (containing '100-0000') and a 'Set' button. At the bottom right of the 'Setting' section is a 'Load Default' button.

- **Device Name**
The name of the opened device.
- **Firmware Version**
The firmware version of the opened device.
- **User Defined Board ID**
The board ID of the opened device. The value can configure when switched the board ID to "0" by the rotary switch.
Note: The valid range of this ID is from 16 to 127.
- **Software WDT**
The software watch dog timer of the opened device. The value enables the functionality to monitor module still alive or not. When enable the watch dog timer, computer and module will send SYNC packet each other. When communication is failure, software WDT also provides functionality to output safety value if the module has output capability.
Note: The valid range of this value is 100 ms ~ 30 minute.
- **Description**
The description of the opened device. This item helps user to identify module.
Note: The maximum characters of the description are 32.
- **Load Default**
This function is used to restore module to default setting (factory setting).

3.2.1.2 Digital Output

In the I/O page of the digital output, the digital output value and module configuration can be read or written in this page. The detail of all items in this form will be introduced in this section.

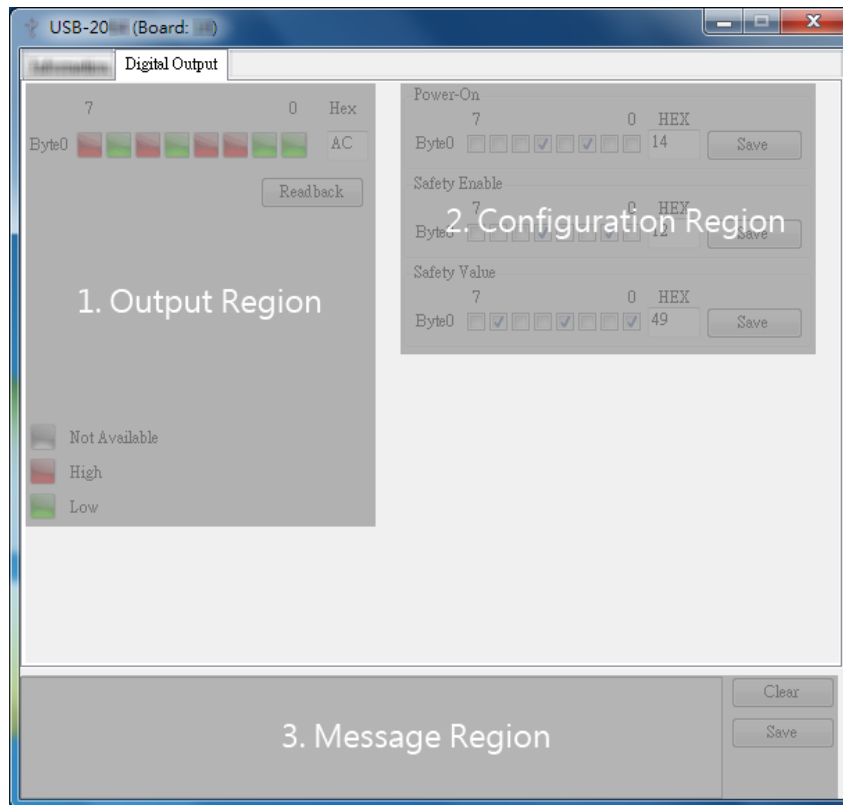

- **Output Region**

The output region is used to write the output value to the module. The output value can be written by the LED to each channel or the hex to all channels. Users can also readback the output value in this region.

NOTE: The readback value is the current output value in the module if the module does not support diagnostic functionality. If the module does support diagnostic, the value for readback will be the actual output value in this module.

- **Configuration Region**

All I/O related configurations can be set in this region.

- **Power-On**

The power-on configuration.

- **Safety Enable**


The safety enable configuration.

- **Safety Value**

The safety value.

3.2.1.3 Analog Input

In the I/O page of the AI, the real-time value and module configuration can be read or written in this page. The detail of all items in this form will be introduced in this section.

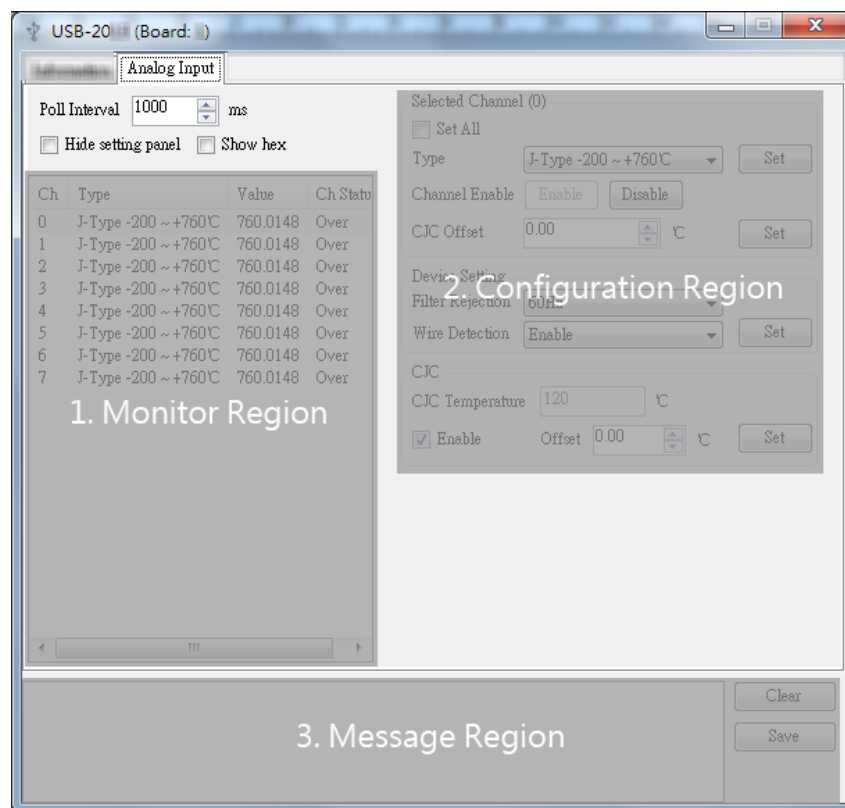

- **Polling Interval**

This value is the period to poll data to the USB I/O module.

Note: The valid value is 100 ~ 5000ms.

- **Hide Setting Panel**

Hiding the I/O configuration panel.

- **Show Hex**

Converting the I/O value from decimal to hexadecimal.

- **Monitor Region**

The I/O related data and configurations will be listed here. Users can select the channel to configure in the "I/O Monitor Region" . The setting of this selected channel will show in "I/O configuration region" .

- **Configuration Region**

All I/O related configurations can be set in this region. This region is divided into two parts, channel and module related setting. The channel related setting is in the "Selected Channel" . The rest are module related settings.

- **Set All**

All channels related setting will follow current selection.

- **Type**

The ICP DAS USB series I/O modules provide programmable input type for analog input. Users can set different type for each analog input channel. For more detail for type of analog input modules, please refer to [Appendix A.1](#).

- **Channel Enable**

Enable / Disable channel.

- **Channel CJC Offset**

Setting the CJC offset for the specific channel. The behavior of the setting is the same as the CJC Offset, but it only affects specific channel.

Note: The CJC offset can be any in the range of -40.96 to +40.95 °C.

- **Filter Rejection**

In order to remove the noise from the power supply, some analog input modules feature build-in noise filter. Two filters, 50Hz and 60Hz, are provided to remove noise generated from power source.

- **Wire Detection**

Enable / Disable the open-wire detection for thermocouple and 4~20 mA.

- **CJC Enable**

Enable / Disable the CJC (Cold-Junction Compensation).


- **CJC Offset**

Setting the CJC offset value for all AI channels. The offset value is used to add or subtract the reading value. Changing of this value will not affect calibration, but will affect the reading value of temperature type.

Note: The CJC offset can be any in the range of -40.96 to +40.95 °C.

3.2.1.4 Pulse Input

In the I/O page of the PI, the real-time value and module configuration can be read or written in this page. The detail of all items in this form will be introduced in this section.

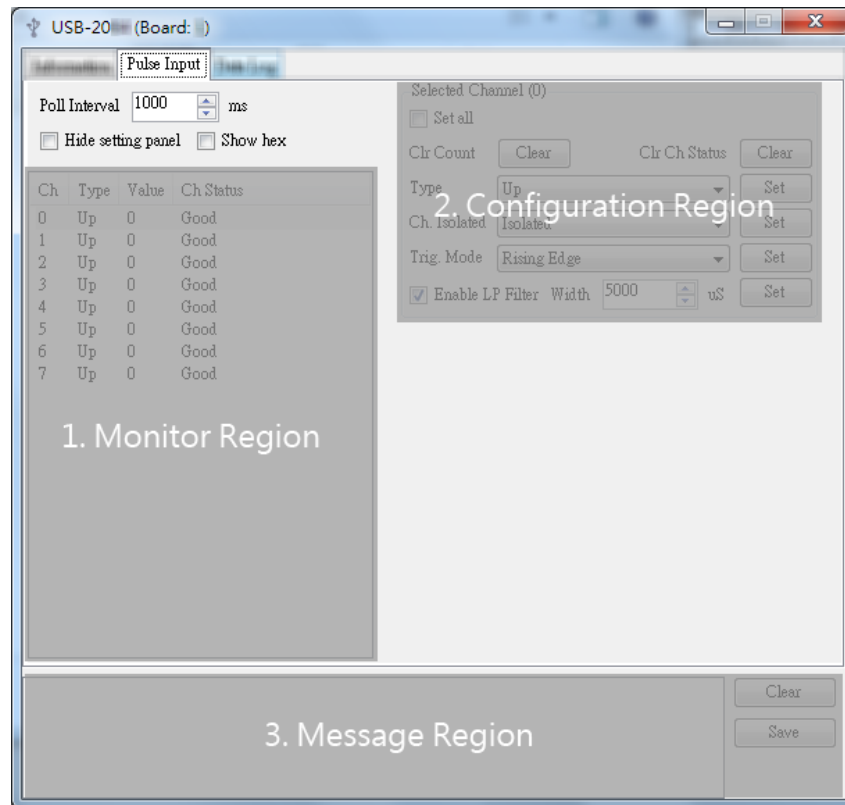

- **Polling Interval**
This value is the period to poll data to the USB I/O module.
Note: The valid value is 100 ~ 5000ms.
- **Hide Setting Panel**
Hiding the I/O configuration panel.
- **Show Hex**
Converting the I/O value from decimal to hexadecimal.
- **Monitor Region**
The I/O related data and configurations will be listed here. Users can select the channel to configure in the "I/O Monitor Region" . The setting of this selected channel will show in "I/O configuration region" .
- **Configuration Region**

All I/O related configurations can be set in this region. This region is divided into two parts, channel and module related setting. The channel related setting is in the "Selected Channel" . The rest are module related settings.

■ **Set All**

All channels related setting will follow current selection.

■ **Type**

The ICP DAS USB series I/O modules provide programmable input type for pulse input. Users can set different type for each pulse input channel. For more detail for type of pulse input modules, please refer to [Appendix A.3](#).

■ **Clr Count**

Clear counter value for specified channel.


■ **Ch. Isolated**

The USB-2084 has isolated and non-isolated (TTL) inputs. To switch different input, two parts have to set as well. One is jumper JP4~JP10 described in [2.5.4.2](#), and the other is Ch. Isolated in Utility.


■ **Trig. Mode**

The USB-2084 has rising and falling edge trigger modes. The difference between rising and falling is the timing of counter operation. In rising edge trigger mode, counter will operate when the input signal from low to high level. In contrast, counter will operate when the input signal from high to low level in the falling edge trigger mode.

Rising edge :

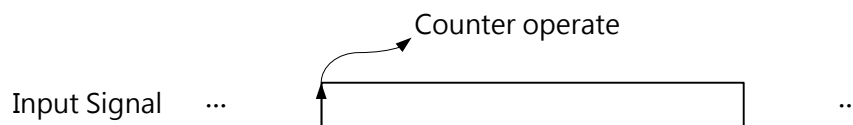

Falling edge :

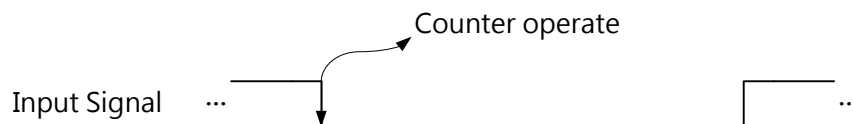

- **Enable LP Filter**

To enable build-in digital low pass filter. The detail of this setting will be introduced in "LP Width" section.

- **LP Width**


The USB-2084 has three independent digital noise filters, LP0, LP1 and LP2, to remove noise. 8 counters share these three filters. The following table shows the relationship between filters and counters.

| Channel | Low Pass Filter |
|---------|-----------------|
| A0 | LP0 |
| B0 | LP0 |
| A1 | LP1 |
| B1 | LP1 |
| A2 | LP2 |
| B2 | LP2 |
| A3 | LP2 |
| B3 | LP2 |


The low pass filter width can be either disable or enable, and the width can be programmed from **1 to 32767 us**.

The basic operation of filter is shown in following figure. The counter will operate when input signal hold on the same level during filter width.

- (a) If the high width of the input signal is shorter than T , the counter will not operate. The input signal will be filtered. The time chart is shown as follow.

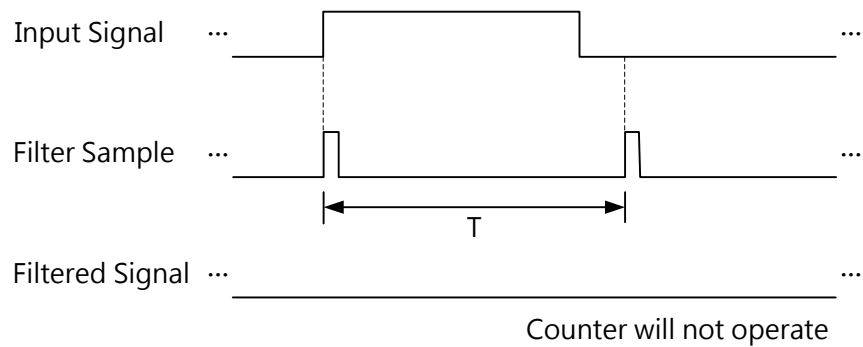


- (b) If the high width of the input signal is greater than T , the counter will operate. The time chart is shown as follow.

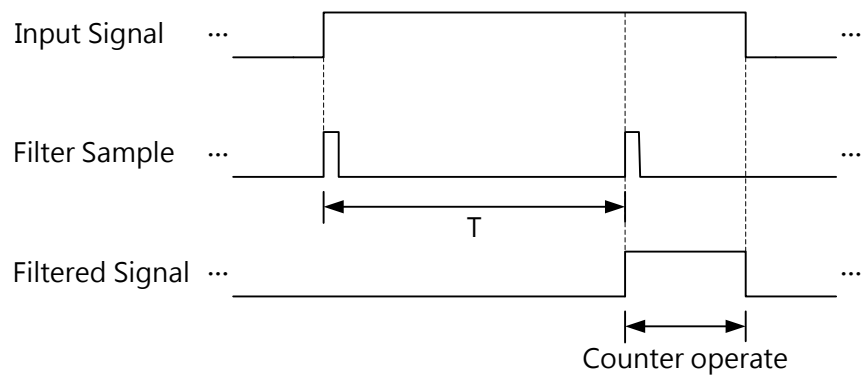



3.2.2 ICP DAS USB I/O Software Integration

The USB I/O libraries are the way to access ICP DAS USB series I/O modules. It supports various IDE like C#/VB.NET/VB/VC/BCB. Users can choose any IDE you familiar with. Before starting up project, you need to do some configuration to integrate the SDK into your IDE. The following section will indicate you how to integrate the SDK into your IDE.

3.2.2.1 .NET

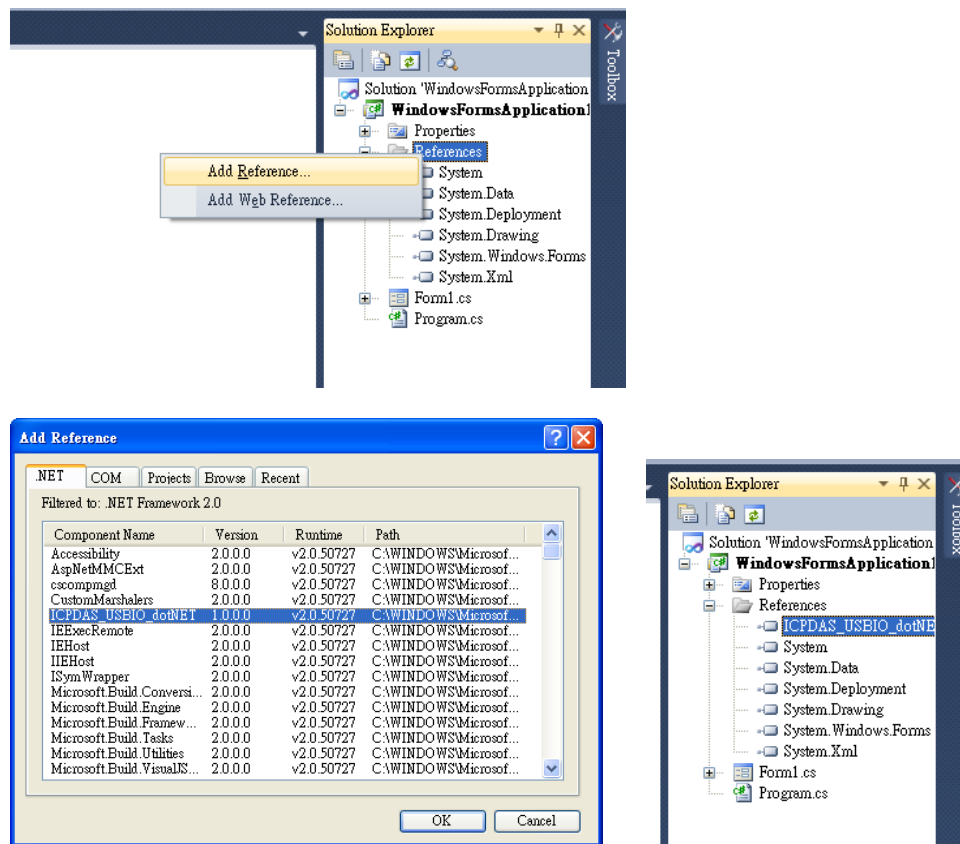


3.2.2.2 VC

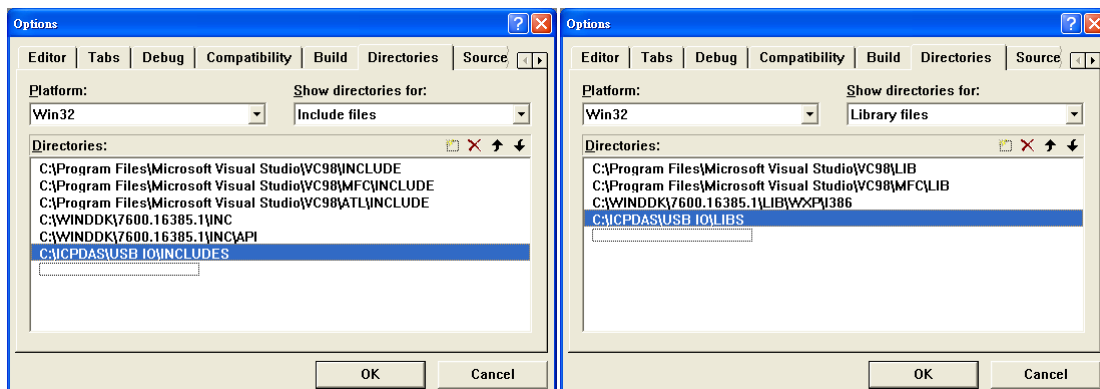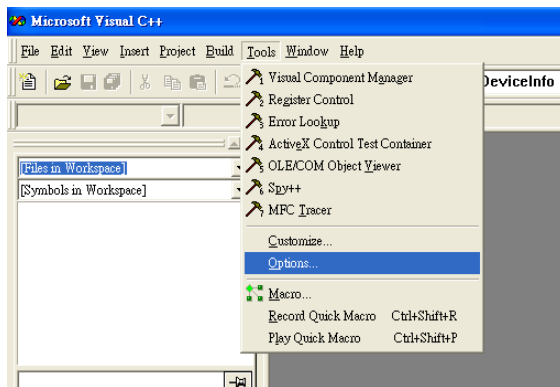

3.2.2.3 BCB

This section is left blank intentionally.

3.2.2.4 VB

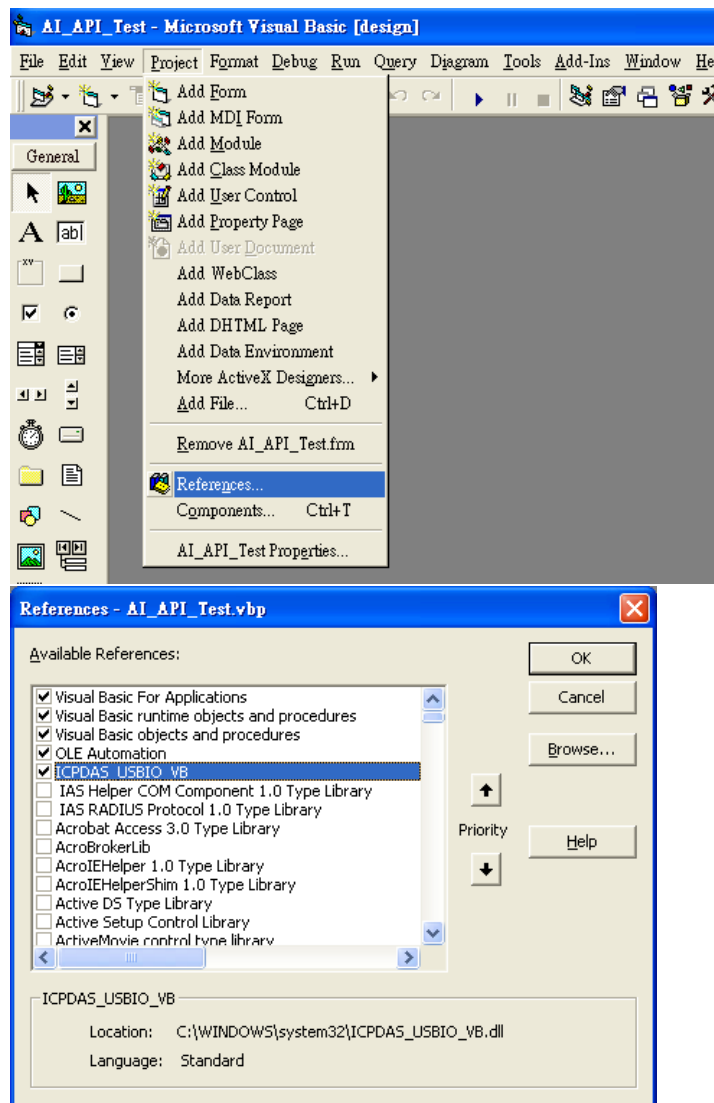


3.2.3 Samples

There are several samples to help user to develop project smoothly. The samples can be found in "Start\Programs\ICPDAS\USB IO\Samples" or the path "C:\ICPDAS\USB IO\Samples".

4 Operation


4.1 Hardware structure




The ICP DAS USB I/O provides various types of input and output. The I/O is handled by embedded controller. The hardware structure is shown in figure 4-1 below.

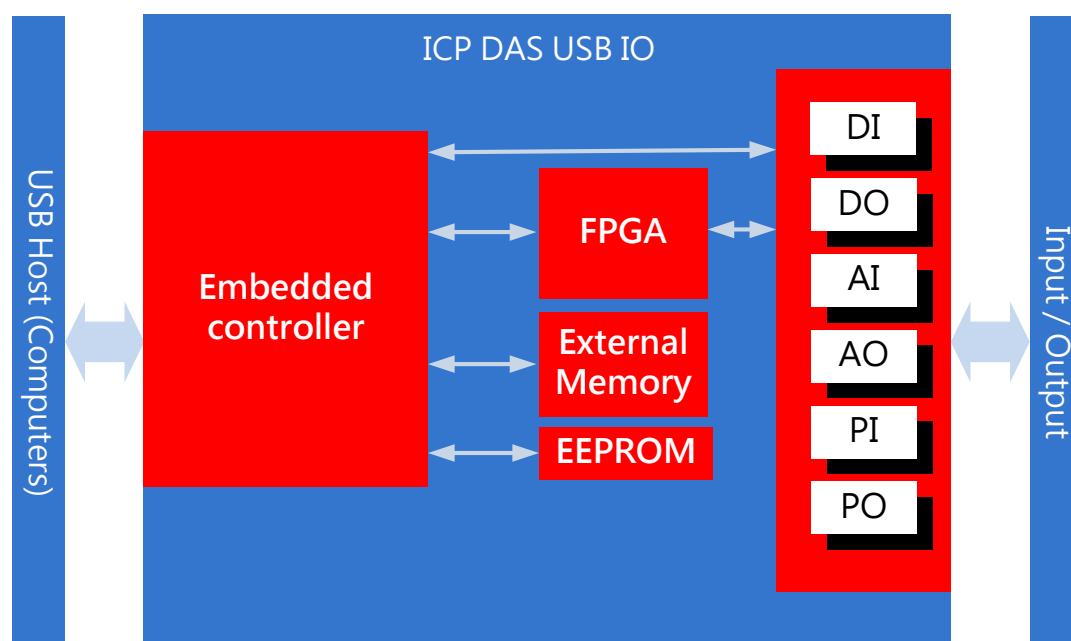

4.2 Software structure

In the programmer point of view, the ICP DAS provides a class library to user to develop project quickly and easily. The structure of the software is shown in figure 4-2. The methods of USB classes are divided into 4 groups, base, digital I/O, analog I/O and pulse I/O. The figures 4-3~4-7 show an overview to use ICP DAS USB I/O class library.

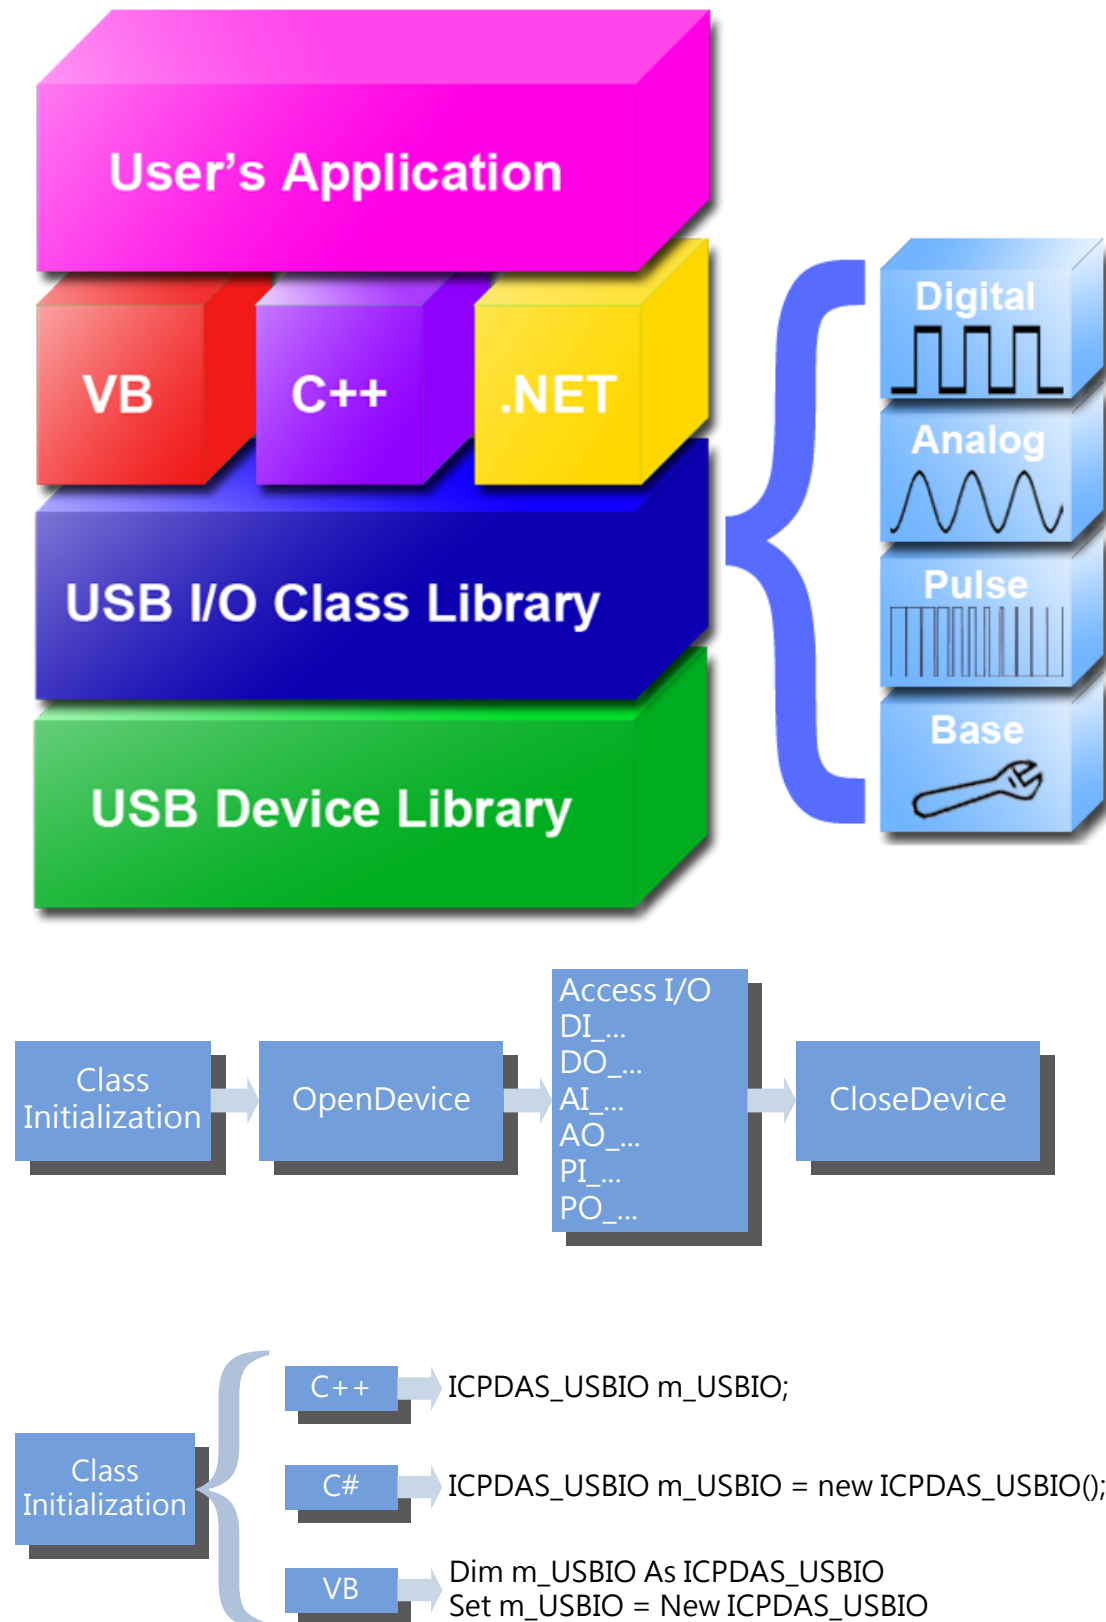

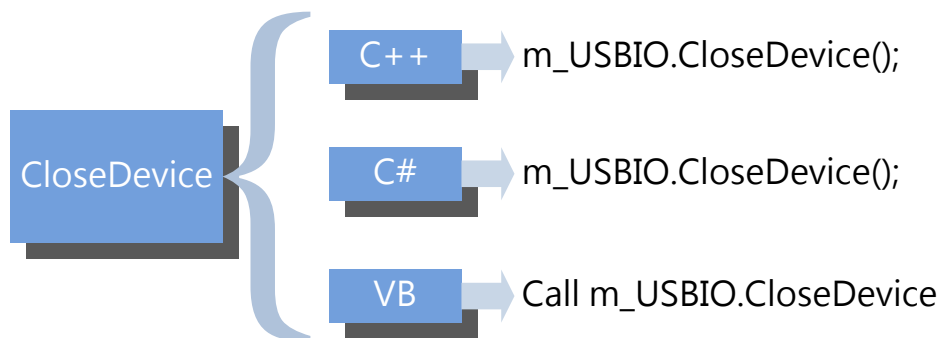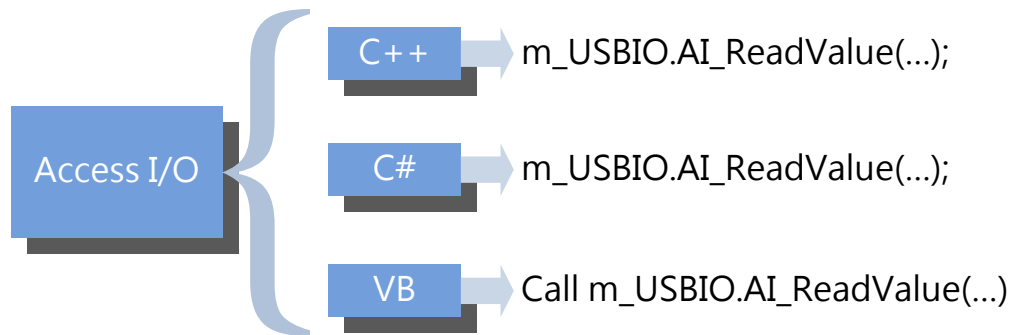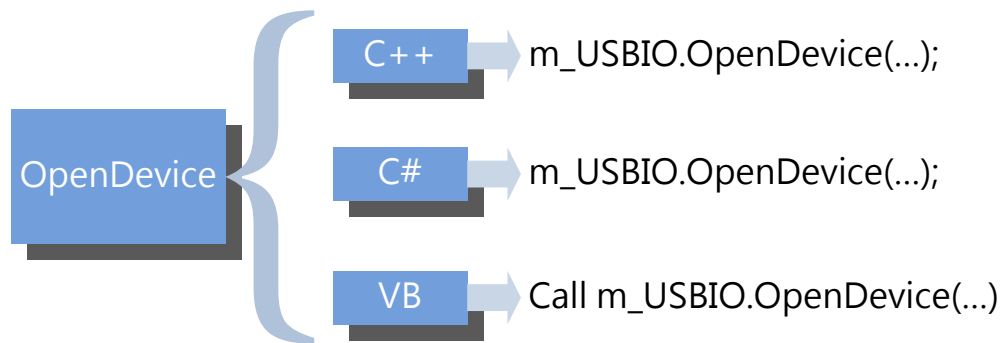

5 ICP DAS USB Class Members

The members of the ICPDAS_USBIO class are divided into constructors, static and public methods. The constructors initialize and create the instance of the ICPDAS_USBIO. Static methods are the ways to identify or scan what USB modules are connected. Public methods are used to access USB modules. The following tables list the members of ICPDAS_USBIO class. The detail of these will be described in the following section.

5.1 Table of Constructors

| Name | Description |
|------------------------------|---|
| ICPDAS_USBIO | Initializes a new instance of the ICPDAS_USBIO class. |

5.2 Table of Static Methods

| Name | Description |
|----------------------------|---|
| ListDevice | List all devices connected with local PC. |
| ScanDevice | Scan devices connected with local PC |

5.3 Table of Public Methods

5.3.1 System

| Name | Description |
|---------------------------------|--|
| OpenDevice | List all devices connected with local PC. |
| CloseDevice | Scan devices connected with local PC. |
| SYNCDevice | Send a synchronization packet to clear software WDT. |
| SetCommTimeout | Set communication timeout. |
| GetCommTimeout | Get communication timeout. |
| SetAutoResetWDT | Enable / disable automatic reset of the WDT |

5.3.2 Device

| Name | Description |
|---|---|
| RefreshDeviceInfo | Refresh device information. |
| GetSoftWDTTimeout | Get software WDT timeout. |
| GetDeviceID | Get ID of the device. |
| GetFwVer | Get firmware version of the device. |
| GetDeviceNickName | Get nick name of the device. |
| GetDeviceSN | Get serial number of the device. |
| GetSupportIOMask | Get the mask of this device IO distribution. |
| GetDITotal | Get DI total channel of the device. |
| GetDOTotal | Get DO total channel of the device. |
| GetAITotal | Get AI total channel of the device. |
| GetAOTotal | Get AO total channel of the device. |
| GetPITotal | Get PI total channel of the device. |
| GetPOTotal | Get PO total channel of the device. |
| SetUserDefinedBoardID | Set board ID of this device. |
| SetDeviceNickName | Set nick name of this device. |
| SetSoftWDTTimeout | Set software WDT timeout. |
| LoadDefault | Load default setting. |
| StopBulk | Stop current bulk process. |
| RegisterEmergencyPktEventHandle | Register the callback function for emergency event sent from USBIO. |

5.3.3 Digital Input

| Name | Description |
|---|--|
| DI_GetDigitalFilterWidth | Digital Input function - Get DI Digital Filter Width |
| DI_GetDigitalValueInverse | Digital Input function - Get DI Value Inverse |
| DI_GetCntEdgeTrigger | Digital Input function - Get DI Counter Edge Trigger |
| DI_ReadValue | Digital Input function - Read DI Value |
| DI_ReadCounterValue | Digital Input function - Read DI Counter Value |
| DI_SetDigitalFilterWidth | Digital Input function - Set DI Digital Filter Width |
| DI_SetDigitalValueInverse | Digital Input function - Set DI Value Inverse |
| DI_SetCntEdgeTrigger | Digital Input function - Set DI Counter Edge Trigger |
| DI_WriteClearCounter | Digital Input function - Clear Specified Channel of DI |

| | |
|---------------------------------------|---|
| | Counter Value |
| DI_WriteClearCounters | Digital Input function - Clear DI Counter Value with Clear Mask |

5.3.4 Digital Output

| Name | Description |
|-------------------------------------|---|
| DO_GetPowerOnEnable | Digital Output function - Get Power-On Enable |
| DO_GetSafetyEnable | Digital Output function - Get Safety Enable |
| DO_GetSafetyValue | Digital Output function - Get Safety Value |
| DO_ReadValue | Digital Output function - Read DO Value |
| DO_SetPowerOnEnable | Digital Output function - Set Power-On Enable |
| DO_SetSafetyEnable | Digital Output function - Set Safety Enable |
| DO_SetSafetyValue | Digital Output function - Set Safety Value |
| DO_WriteValue | Digital Output function - Write DO Value |

5.3.5 Analog Input

| Name | Description |
|--|---|
| AI_GetTotalSupportType | Analog input function - Get total supported amount. |
| AI_GetSupportTypeCode | Analog input function - Get supported type code. |
| AI_GetTypeCode | Analog input function - Get type code. |
| AI_GetChCJCOffset | Analog input function - Get channel CJC offset. |
| AI_GetChEnable | Analog input function - Get channel enable/disable. |
| AI_GetFilterRejection | Analog input function - Get filter rejection. |
| AI_GetCJCOffset | Analog input function - Get CJC offset. |
| AI_GetCJCEnable | Analog input function - Get CJC enable. |
| AI_GetWireDetectEnable | Analog input function - Get wire detect enable. |
| AI_GetResolution | Analog input function - Get resolution. |
| AI_ReadValue | Analog input function - Read AI value in double word format. (Overload) |
| AI_ReadBulkValue | Analog input function - Read bulk AI value (Fast acquire functionality) |
| AI_ReadCJCValue | Analog input function - Get CJC value. |
| AI_SetTypeCode | Analog input function - Set type code for specific channel. (Overload) |

| | |
|--|---|
| AI_SetChCJCOffset | Analog input function - Set channel CJC offset for specific channel. (Overload) |
| AI_SetChEnable | Analog input function - Set channel enable/disable. |
| AI_SetFilterRejection | Analog input function - Set filter rejection. |
| AI_SetCJCOffset | Analog input function - Set CJC offset. |
| AI_SetCJCEnable | Analog input function - Set CJC enable. |
| AI_SetWireDetectEnable | Analog input function - Set wire detect enable. |

5.3.6 Pulse Input

| Name | Description |
|--|---|
| PI_GetTotalSupportType | Pulse input function - Get total supported amount. |
| PI_GetSupportTypeCode | Pulse input function - Get supported type code. |
| PI_GetTypeCode | Pulse input function - Get type code. |
| PI_GetTriggerMode | Pulse input function - Get trigger mode. |
| PI_GetLPFilterEnable | Pulse input function - Get low-pass filter enable. |
| PI_GetChIsolatedFlag | Pulse input function - Get channel isolated flag. |
| PI_GetLPFilterWidth | Pulse input function - Get low-pass filter width. |
| PI_ReadValue | Pulse input function - Read PI value. |
| PI_ReadCntValue | Pulse input function - Read the count value of counters |
| PI_ReadFreqValue | Pulse input function - Read the frequency value of counters |
| PI_ReadBulkValue | Pulse input function - Get bulk PI value (Fast acquire functionality) |
| PI_SetTypeCode | Pulse input function - Set type code for specific channel. (Overload) |
| PI_ClearChCount | Pulse input function - Clear channel count with clear mask. |
| PI_ClearSingleChCount | Pulse input function - Clear single channel count. |
| PI_ClearChStatus | Pulse input function - Clear channel status with clear mask. |
| PI_ClearSingleChStatus | Pulse input function - Clear single channel status. |
| PI_SetTriggerMode | Pulse input function - Set trigger mode. (Overload) |
| PI_SetChIsolatedFlag | Pulse input function - Set channel isolated flag. (Overload) |
| PI_SetLPFilterEnable | Pulse input function - Set low-pass filter enable. |

| | |
|-------------------------------------|---|
| | (Overload) |
| PI_SetLPFilterWidth | Pulse input function - Set low-pass filter width. (Overload) |

5.3.7 Other

| Name | Description |
|------------------------|---------------------------------------|
| GetCurrentAccessObj | INTERNAL USE. DO NOT USE THIS METHOD. |
| SetNormalPktByteArray | INTERNAL USE. DO NOT USE THIS METHOD. |
| SetActivePktByteArray | INTERNAL USE. DO NOT USE THIS METHOD. |
| ClearActivePktBuffer | INTERNAL USE. DO NOT USE THIS METHOD. |
| GetActivePktByteArray | INTERNAL USE. DO NOT USE THIS METHOD. |
| SetNormalPktEvent | INTERNAL USE. DO NOT USE THIS METHOD. |
| IsDevMonitorThreadStop | INTERNAL USE. DO NOT USE THIS METHOD. |
| IsCommWithDevice | INTERNAL USE. DO NOT USE THIS METHOD. |
| GetLastCmdTime | INTERNAL USE. DO NOT USE THIS METHOD. |

5.4 Constructors

5.4.1 ICPDAS_USBIO

Initialize a new instance of the ICPDAS_USBIO class.

Syntax

```
public ICPDAS_USBIO (
    void
)
```

Example

```
ICPDAS_USBIO m_usbIO;

m_usbIO = new ICPDAS_USBIO();
```

5.5 Static Methods

5.5.1 ListDevice

List all devices connected to local PC.

Syntax

```
public byte ListDevice (  
    WORD *o_wDID,  
    BYTE *o_byBID  
)
```

Parameters

*o_wDID
[OUT] An array of device ID for all devices

*o_byBID
[OUT] An array of board ID for all devices

Return Value

Number of devices connected with PC

Example

```
BYTE byNumDevice, byBIDs[127];  
WORD wDIDs[127];  
  
byNumDevice = ICPDAS_USBIO.ListDevice(&wDIDs, &byBIDs);
```

5.5.2 ScanDevice

Scanning device connected to PC. This static method just refreshes the list of the ICP DAS USB series I/O modules, it is necessary to call ListDevice() to refresh new list.

Syntax

```
public int ScanDevice (  
    void  
)
```

Parameters

```
none
```

Return Value

```
Error code
```

Example

```
ICPDAS_USBIO.ScanDevice();
```

5.6 Public Methods

5.6.1 System

5.6.1.1 OpenDevice

Open USBIO with device ID and board ID. The device ID is defined by the header ICPDAS_USBIO.h or the enumeration in ICPDAS_USBIO.

Syntax

```
public int OpenDevice (  
    WORD i_wUSBIO_DID,  
    BYTE i_byUSBIO_BID  
)
```

Parameters

i_wUSBIO_DID

[IN] Device ID for the specific device to open (Defined in ICPDAS_USBIO.h)

i_byUSBIO_BID

[IN] Board ID for the specific device to open

Return Value

Error code

Example

```
Int iErrCode;  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
iErrCode = m_usbIO.OpenDevice(USB2019, 1);  
iErrCode = m_usbIO.CloseDevice();
```

5.6.1.2 CloseDevice

Close device and release resource.

Syntax

```
public int CloseDevice (  
    void  
)
```

Parameters

none

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if (ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    // Some code accessing USB I/O  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.1.3 SYNCDevice

Send synchronization packet to I/O module.

Note 1: The synchronization will be handled by library automatically after calling OpenDevice, the synchronization will be closed after calling CloseDevice. User can call this API to send synchronization packet manually, and it will not stop the original synchronization.

Syntax

```
public int SYNCDevice (  
    void  
)
```

Parameters

none

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if (ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    If(ERR_NO_ERR != (iErrCode = m_usbIO.SYNCDevice()))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.1.4 SetCommTimeout

Set the communication timeout between packet send and receive.

Note 1: The timeout value will affect communication. If the timeout is small, it means the communication is timeout after the value passed.

Note 2: The default value when first initial an ICP DAS USB I/O is 100ms.

Syntax

```
public int SetCommTimeout (
    DWORD i_dwCommTimeout
)
```

Parameters

i_dwCommTimeout

[IN] The communication timeout in millisecond(ms)

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR != (iErrCode = m_usbIO.SetCommTimeout(1000)))
    printf( "%d" , iErrCode)
```


5.6.1.5 GetCommTimeout

Get the communication timeout between packet send and receive.

Note 1: The timeout value will affect communication. If the timeout is small, it means the communication is timeout after the value passed.

Note 2: The default value when first initial an ICP DAS USB I/O is 100ms.

Syntax

```
public int GetCommTimeout (  
    DWORD* o_dwCommTimeout  
)
```

Parameters

```
o_dwCommTimeout  
[OUT] The communication timeout in millisecond(ms)
```

Return Value

```
Error code
```

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
DWORD o_dwCommTimeout;  
  
m_usbIO = new ICPDAS_USBIO();  
if (ERR_NO_ERR == (iErrCode = m_usbIO.SetCommTimeout(1000)))  
    if (ERR_NO_ERR != (iErrCode = m_usbIO.GetCommTimeout (&o_dwCommTimeout)))  
        printf( "%d" , iErrCode);  
else  
    printf( "%d\n" , o_dwCommTimeout);
```

5.6.1.6 SetAutoResetWDT

Enable / disable the handle of watchdog by library.

The library takes care of the watchdog automatically when first loaded. This advantage brings an easy way to access with USB modules. But in other side, sometimes users want to handle watchdog themselves. This API offers this functionality to disable the library to automatically handle watchdog.

NOTE1: The library will return to automatic when open device. This means users have to disable when open device.

Syntax

```
public int SetAutoResetWDT (
    BOOL i_bEnable
)
```

Parameters

i_bEnable

[IN] To enable / disable the library to automatically handle watchdog.

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;

m_usbIO = new ICPDAS_USBIO();
if (ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    If(ERR_NO_ERR != (iErrCode = m_usbIO.SetAutoResetWDT(FALSE)))
        printf( "%d" , iErrCode);
}
```

5.6.2 Device

5.6.2.1 RefreshDeviceInfo

Refresh all information of this device.

Note 1: The RefreshDeviceInfo() will be called automatically when open device.

Note 2: This function will take time to refresh information.

Syntax

```
public int RefreshDeviceInfo (
    void
)
```

Parameters

none

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != iErrCode = m_usbIO.RefreshDeviceInfo())
        printf( "%d" , iErrCode)
    iErrCode = m_usbIO.CloseDevice();
}
```

5.6.2.2 GetSoftWDTTimeout

Get the software WDT timeout of I/O module.

Syntax

```
public int GetSoftWDTTimeout (  
    DWORD *o_dwSoftWDTTimeout  
)
```

Parameters

*o_dwSoftWDTTimeout

[OUT] The software WDT timeout in millisecond(ms)

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
DWORD o_dwSoftWDTTimeout;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != iErrCode = m_usbIO.GetSoftWDTTimeout (&o_dwSoftWDTTimeout))  
        printf( "%d" ,iErrCode);  
    else  
        printf( "%d\n" , o_dwCommTimeout);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.3 GetDeviceID

Get ID of the device.

Syntax

```
public int GetDeviceID (  
    DWORD *o_dwDeviceID  
)
```

Parameters

*o_dwDeviceID
[OUT] The device ID

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
DWORD o_dwDeviceID;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetDeviceID (&o_dwDeviceID)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d" , o_dwDeviceID);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.4 GetFwVer

Get firmware version of the device.

Syntax

```
public int GetDeviceID (  
    WORD *o_wFwVer  
)
```

Parameters

*o_wFwVer
[OUT] The firmware version

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
WORD o_wFwVer;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetFwVer (&o_wFwVer)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d" , o_wDwVer);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.5 GetDeviceNickName

Get nick name of the device.

Syntax

```
public int GetDeviceNickName (  
    BYTE *o_byDeviceNickName  
)
```

Parameters

*o_byDeviceNickName
[OUT] The byte array of the nick name of the device

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byDeviceNickName [USBIO_NICKNAME_LENGTH];  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetDeviceNickName (o_byDeviceNickName)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%s" , o_byDeviceNickName);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.6 GetDeviceSN

Get serial number of the device.

Syntax

```
public int GetDeviceSN (  
    BYTE *o_byDeviceSN  
)
```

Parameters

*o_byDeviceSN
[OUT] The byte array of the serial number of the device

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byDeviceSN [USBIO_SN_LENGTH];  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetDeviceSN (o_byDeviceSN)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%s" , o_byDeviceSN);  
    iErrCode = m_usbIO.CloseDevice();  
}
```


5.6.2.7 GetSupportIOMask

Get the mask of this device IO distribution. Each bit of the mask indicates each supported IO type as shown in the following table.

| Bit7 | Bit6 | Bit5 | Bit4 | Bit3 | Bit2 | Bit1 | Bit0 |
|------|------|------|------|------|------|------|------|
| N/A | N/A | PI | PO | AI | AO | DI | DO |

This mask can help you to identify what types of IO are supported in the device.

Syntax

```
public int GetSupportIOMask (  
    BYTE *o_bySupportIOMask  
)
```

Parameters

*o_bySupportIOMask

[OUT] The support IO mask of the device

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_bySupportIOMask;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetSupportIOMask (&o_bySupportIOMask)))
        printf( "%d" , iErrCode);
    else
        printf( "0x%02x" ,o_bySupportIOMask);
    iErrCode = m_usbIO.CloseDevice();
}
```

5.6.2.8 GetDITotal

Get DI total number of channels of the device.

Syntax

```
public int GetDITotal (  
    BYTE *o_byDITotal  
)
```

Parameters

*o_byDITotal
[OUT] The DI total number of channels

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byDITotal;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetDITotal (&o_byDITotal)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d" ,o_byDITotal);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.9 GetDOTotal

Get DO total number of channels of the device.

Syntax

```
public int GetDOTotal (  
    BYTE *o_byDOTotal  
)
```

Parameters

*o_byDOTotal
[OUT] The DO total number of channels

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byDOTotal;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetDOTotal (&o_byDOTotal)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d" , o_byDOTotal);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.10 GetAITotal

Get AI total number of channels of the device.

Syntax

```
public int GetAITotal (  
    BYTE *o_byAITotal  
)
```

Parameters

*o_byAITotal
[OUT] The AI total number of channels

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byAITotal;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetAITotal (&o_byAITotal)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d" ,o_byAITotal);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.11 GetAOTotal

Get AO total number of channels of the device.

Syntax

```
public int GetAOTotal (  
    BYTE *o_byAOTotal  
)
```

Parameters

*o_byAOTotal
[OUT] The AO total number of channels

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byAOTotal;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetAOTotal (&o_byAOTotal)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d" ,o_byAOTotal);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.12 GetPITotal

Get PI total number of channels of the device.

Syntax

```
public int GetPITotal (  
    BYTE *o_byPITotal  
)
```

Parameters

*o_byPITotal
[OUT] The PI total number of channels

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byPITotal;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetPITotal (&o_byPITotal)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d" , o_byPITotal);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.13 GetPOTotal

Get PO total number of channels of the device.

Syntax

```
public int GetPOTotal (  
    BYTE *o_byPOTotal  
)
```

Parameters

*o_byPOTotal
[OUT] The PO total number of channels

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byPOTotal;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.GetPOTotal (&o_byPOTotal)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d" ,o_byPOTotal);  
    iErrCode = m_usbIO.CloseDevice();  
}
```


5.6.2.14 SetUserDefinedBoardID

Set board ID of this device. The valid value of the ID is from 16 to 127.

Syntax

```
public int SetUserDefinedBoardID (  
    BYTE i_byBID  
)
```

Parameters

i_byBID
[IN] The board ID to set

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.SetUserDefinedBoardID (123)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.15 SetDeviceNickName

Set nick name of this device. The maximum number of the character of this device is 32.

Syntax

```
public int SetDeviceNickName (  
    BYTE *i_byDeviceNickName  
)
```

Parameters

*i_byDeviceNickName
[IN] The byte array of the nick name to set

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte byNickName[USBIO_NICKNAME_LENGTH];  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))  
{  
    sprintf(byNickName, "Station 1-1-3" );  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.SetDeviceNickName (byNickName)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.16 SetSoftWDTTimeout

Set the software WDT timeout.

The minimum value of timeout is 100ms, and maximum is 30 minutes.

Syntax

```
public int SetSoftWDTTimeout (  
    DWORD i_dwSoftWDTTimeout  
)
```

Parameters

i_dwSoftWDTTimeout

[IN] The software WDT timeout in millisecond(ms)

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.SetSoftWDTTimeout(1000)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.17 LoadDefault

Load default setting.

Syntax

```
public int LoadDefault (  
    void  
)
```

Parameters

none

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if (ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))  
{  
    If(ERR_NO_ERR != (iErrCode = m_usbIO.LoadDefault ()))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.2.18 StopBulk

Stop current bulk process.

Syntax

```
public int LoadDefault (
    void
)
```

Parameters

none

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;

m_usbIO = new ICPDAS_USBIO();
if (ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))
{
    If(ERR_NO_ERR != (iErrCode = m_usbIO.StopBulk ()))
        printf( "%d" , iErrCode);
    iErrCode = m_usbIO.CloseDevice();
}
```

5.6.2.19 RegisterEmergencyPktEventHandle

Register the callback function for emergency event sent from USBIO.

When in callback operation, it will cause the performance in your callback function.

Please reduce execute time in this callback function.

Syntax

```
public int RegisterEmergencyPktEventHandle (  
    OnEmergencyPktArriveEvent i_evtHandle  
)
```

Parameters

i_evtHandle

[IN] The callback function for emergency event

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Bool m_bEmcyPktArrive;
Byte byEmcyPkt[USBIO_MAX_PACKET_LENGTH];

Void emcypkeEvt(Byte* byData, Byte byLen)
{
    m_bEmcyPktArrive = true;
    memcpy(byEmcyPkt, byData, byLen);
}

m_usbIO = new ICPDAS_USBIO();
if (ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB20xx, 1)))
{
    If(ERR_NO_ERR != (iErrCode = m_usbIO.RegisterEmergencyPktEventHandle (emcypkeEvt)))
        printf( "%d" , iErrCode);
    while(1)
    {
        // User' s application loop
        If(m_bEmcyPktArrive)
        {
            // Handle emcy packet
        }
    }
    iErrCode = m_usbIO.CloseDevice();
}
```

5.6.3 Digital Input

5.6.3.1 DI_GetDigitalFilterWidth

Digital input function - Get DI Digital Filter Width. The digital filter width is used for filtering the noise or the glitch. The unit of the filter is 0.1 milli-second.

Syntax

```
public int DI_GetDigitalFilterWidth (  
    WORD* o_wFilterWidth  
)
```

Parameters

*o_wFilterWidth

[OUT] The digital filter width (The unit is 0.1 ms)

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
WORD o_wFilterWidth;
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2051, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DI_GetDigitalFilterWidth (&o_wFilterWidth)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        printf( "%d\n" , o_wFilterWidth);
    }
}
```

5.6.3.2 DI_GetDigitalValueInverse

Digital input function - Get DI Value Inverse.

| Inverse | Value |
|---------|-------|
| No | 0 |
| Yes | 1 |

Syntax

```
public int DI_GetDigitalValueInverse (  
    DWORD* o_dwInverse  
)
```

Parameters

*o_dwInverse
[OUT] The inverse setting

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
DWORD o_dwInverse;
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2051, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DI_GetDigitalValueInverse (&o_dwInverse)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        printf( "%d\n" , o_dwInverse);
    }
}
```

5.6.3.3 DI_GetCntEdgeTrigger

Digital input function - Get DI Counter Edge Trigger. This edge trigger is used for the counting operation of the counter.

| Edge Trigger | Value |
|--------------|-------|
| Falling | 0 |
| Rising | 1 |

Syntax

```
public int DI_GetCntEdgeTrigger (  
    DWORD* o_dwEdgeTrig  
)
```

Parameters

*o_dwEdgeTrig
[OUT] The counter edge trigger setting

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
DWORD o_dwEdgeTrig;
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2051, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DI_GetCntEdgeTrigger (&o_dwEdgeTrig)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        printf( "%d\n" , o_dwEdgeTrig);
    }
}
```

5.6.3.4 DI_ReadValue

Digital Input function - Read DI Value. The values of digital input channels in byte array format.

Syntax

```
public int DI_ReadValue (  
    BYTE* o_byDIValue  
)
```

Parameters

*o_byDIValue
[OUT] The byte arrays of the DI value

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
BYTE o_byDIValue[USBIO_DI_MAX_CHANNEL];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2051, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DI_ReadValue (o_byDIValue)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        for(iIdx = 0; iIdx < (USBIO_DI_MAX_CHANNEL >> 3); iIdx++)
            printf( "%d\n" , o_byDIValue[iIdx]);
    }
}
```

5.6.3.5 DI_ReadCounterValue

Digital Input function - Read DI Counter Value. The counting value of the digital input counter in word array format.

Syntax

```
public int DI_ReadCounterValue (  
    WORD* o_wDICntValue  
)
```

Parameters

*o_wDICntValue
[OUT] The word arrays of the DI counter value

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
WORD o_wDICntValue[USBIO_DI_MAX_CHANNEL];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2051, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DI_ReadCounterValue (o_wDICntValue)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        for(iIdx = 0; iIdx < (USBIO_DI_MAX_CHANNEL >> 3); iIdx++)
            printf( "%d\n" , o_wDICntValue[iIdx]);
    }
}
```

5.6.3.6 DI_SetDigitalFilterWidth

Digital input function - Set DI Digital Filter Width. Used for setting the filter width for the digital input. The unit of the filter width is 0.1 milli-second.

Syntax

```
public int DI_SetDigitalFilterWidth (  
    WORD* i_wFilterWidth  
)
```

Parameters

*i_wFilterWidth
[IN] The digital filter width (The unit is 0.1 ms)

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2051, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DI_SetDigitalFilterWidth(10))  
        printf( "%d" , iErrCode);  
    m_usbIO.CloseDevice();  
}
```

5.6.3.7 DI_SetDigitalValueInverse

Digital input function - Set DI Value Inverse.

| Inverse | Value |
|---------|-------|
| No | 0 |
| Yes | 1 |

Syntax

```
public int DI_SetDigitalValueInverse (  
    DWORD* i_dwInverse  
)
```

Parameters

*i_dwInverse
[IN] The inverse setting

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2051, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DI_SetDigitalValueInverse (1))  
        printf( "%d" , iErrCode);  
    m_usbIO.CloseDevice();  
}
```

5.6.3.8 DI_SetCntEdgeTrigger

Digital input function - Set DI Counter Edge Trigger.

| Edge Trigger | Value |
|--------------|-------|
| Falling | 0 |
| Rising | 1 |

Syntax

```
public int DI_SetCntEdgeTrigger (  
    DWORD* i_dwEdgeTrig  
)
```

Parameters

*i_dwEdgeTrig

[IN] The counter edge trigger setting

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2051, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DI_SetCntEdgeTrigger (1))  
        printf( "%d" , iErrCode);  
    m_usbIO.CloseDevice();  
}
```

5.6.3.9 DI_WriteClearCounter

Digital input function - Clear specified channel of DI Counter Value.

Syntax

```
public int DI_WriteClearCounter (  
    BYTE* i_byChToClr  
)
```

Parameters

*i_byChToClr
[IN] The counter channel for clearing

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2051, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DI_WriteClearCounter (1))  
        printf( "%d" , iErrCode);  
    m_usbIO.CloseDevice();  
}
```

5.6.3.10 DI_WriteClearCounters

Digital input function - Clear DI Counter Value with Clear Mask.

Syntax

```
public int DI_WriteClearCounters (  
    DWORD* i_dwCntClrMask  
)
```

Parameters

*i_dwCntClrMask

[IN] The counter clear mask

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2051, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DI_WriteClearCounters (0x0000FFFF))  
        printf( "%d" , iErrCode);  
    m_usbIO.CloseDevice();  
}
```

5.6.4 Digital Output

5.6.4.1 DO_GetPowerOnEnable

Digital Output function - Get Power-On Enable

| Power-On Enable | Value |
|-----------------|-------|
| Disable & Off | 0 |
| Enable & On | 1 |

Syntax

```
public int DO_GetPowerOnEnable(  
    BYTE* o_byPowerOnEnable  
)
```

Parameters

*o_byPowerOnEnable

[OUT] The power-on enable mask. Each byte represents the power-on enable / disable configuration of each channel.

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byPowerOnEnable[USBIO_DO_MAX_CHANNEL];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2064, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DO_GetPowerOnEnable (&o_byPowerOnEnable)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        for(iIdx = 0; iIdx < USBIO_DO_MAX_CHANNEL; iIdx++)
            printf( "%02x\n" , o_byPowerOnEnable[iIdx]);
    }
}
```


5.6.4.2 DO_GetSafetyEnable

Digital Output function - Get Safety Enable. Each channel takes one bit.

| Safety Enable | Value |
|---------------|-------|
| Disable | 0 |
| Enable | 1 |

Syntax

```
public int DO_GetSafetyEnable (  
    BYTE* o_bySafetyEnables  
)
```

Parameters

*o_bySafetyEnables

[OUT] The safety enable mask. Each bit of the mask represents the safety enable / disable configuration of each channel

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_bySafetyEnable[(USBIO_DO_MAX_CHANNEL + 7) / 8];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2064, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DO_GetSafetyEnable(&o_bySafetyEnables))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        for(iIdx = 0; iIdx < ((USBIO_DO_MAX_CHANNEL + 7) / 8); iIdx++)
            printf( "%02x\n" , o_bySafetyEnables[iIdx]);
    }
}
```

5.6.4.3 DO_GetSafetyValue

Digital Output function - Get Safety Value. Each channel takes one bit.

| Safety Value | Value |
|--------------|-------|
| Off | 0 |
| On | 1 |

Syntax

```
public int DO_GetSafetyValue(  
    BYTE* o_bySafetyValue  
)
```

Parameters

*o_bySafetyValue

[OUT] The safety value. Each bit represents the safety value of each channel.

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_bySafetyValue[(USBIO_DO_MAX_CHANNEL + 7] / 8];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2064, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DO_GetSafetyValue(&o_bySafetyValue))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        for(iIdx = 0; iIdx < ((USBIO_DO_MAX_CHANNEL + 7] / 8); iIdx++)
            printf( "%02x\n" , o_bySafetyValue[iIdx]);
    }
}
```

5.6.4.4 DO_ReadValue

Digital Output function - Read DO Value

Syntax

```
public int DO_ReadValue(  
    BYTE* o_byDOValue  
)
```

Parameters

*o_byDOValue

[OUT] The DO value. Each bit represents the DO value of each channel.

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byDOValue[(USBIO_DO_MAX_CHANNEL + 7) / 8];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2064, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DO_ReadValue(&o_byDOValue))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        for(iIdx = 0; iIdx < ((USBIO_DO_MAX_CHANNEL + 7) / 8); iIdx++)
            printf( "%02x\n" , o_byDOValue[iIdx]);
    }
}
```

5.6.4.5 DO_SetPowerOnEnable

The class has two overload methods for configuring power on functionality. One provides specifying channel to set, another for all channel. These two overload methods are listed as following table and described in following section.

| Name of Methods |
|---|
| DO_SetPowerOnEnable(BYTE i_byChToSet, BYTE i_byPowerOnEnable) |
| DO_SetPowerOnEnable(BYTE* i_byPowerOnEnables) |

5.6.4.5.1 DO_SetPowerOnEnable (BYTE, BYTE)

Digital Output function - Set Power-On enable for specific channel. The value of the enable byte is listed below.

| Power-On Enable | Value |
|-----------------|-------|
| Disable & Off | 0 |
| Enable & On | 1 |

Syntax

```
public int DO_SetPowerOnEnable (  
    BYTE i_byChToSet,  
    BYTE i_byPowerOnEnable  
)
```

Parameters

i_byChToSet

[IN] The specific channel to set

i_byTypeCode

[IN] The power-on enable for the specific channel

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2064, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DO_SetPowerOnEnable(0, 0x1)))
        printf( "%d" , iErrCode);
    iErrCode = m_usbIO.CloseDevice();
}
```

5.6.4.5.2 DO_SetPowerOnEnable (BYTE*)

Digital Output function - Set Power-On enable for all channel. The value of the enable byte is listed below.

| Power-On Enable | Value |
|-----------------|-------|
| Disable & Off | 0 |
| Enable & On | 1 |

Syntax

```
public int DO_SetPowerOnEnable (  
    BYTE *i_byPowerOnEnables  
)
```

Parameters

*i_byPowerOnEnables
[IN] The byte array of the power-on enable

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte i_byChPwrOn[USBIO_DO_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2064, 1)))
{
    For(iIdx = 0; iIdx < USBIO_DO_MAX_CHANNEL; iIdx)
        i_byChPwrOn[iIdx] = 0x1;
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DO_SetPowerOnEnable(i_byChPwrOn)))
        printf( "%d" , iErrCode);
    iErrCode = m_usbIO.CloseDevice();
}
```

5.6.4.6 DO_SetSafetyEnable

Digital Output function - Set Safety Enable. Each bit represents channel safety enable.
The value of the safety enable is shown below.

| Safety Enable | Value |
|---------------|-------|
| Disable | 0 |
| Enable | 1 |

Syntax

```
public int DO_SetSafetyEnable(  
    BYTE* i_bySafetyEnable  
)
```

Parameters

*i_bySafetyEnable

[IN] The safety enable mask. Each bit represents the safety configuration of each channel.

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte i_bySafetyEnable[(USBIO_DO_MAX_CHANNEL + 7] / 8];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2064, 1)))
{
    memset(i_bySafetyEnable, 0xFF, (USBIO_DO_MAX_CHANNEL + 7] / 8];
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DO_SetSafetyEnable(i_bySafetyEnable))
        printf( "%d" , iErrCode);
    m_usbIO.CloseDevice();
}
```

5.6.4.7 DO_SetSafetyValue

Digital Output function - Set Safety Value. Each bit represents safety value. The value of the safety is shown below.

| Safety Value | Value |
|--------------|-------|
| Off | 0 |
| On | 1 |

Syntax

```
public int DO_SetSafetyValue(  
    BYTE* i_bySafetyValue  
)
```

Parameters

*i_bySafetyValue

[IN] The safety value. Each bit represents the safety value of each channel.

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte i_bySafetyValue[(USBIO_DO_MAX_CHANNEL + 7] / 8];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2064, 1)))
{
    memset(i_bySafetyValue, 0xFF, (USBIO_DO_MAX_CHANNEL + 7] / 8];
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DO_SetSafetyValue(i_bySafetyValue))
        printf( "%d" , iErrCode);
    m_usbIO.CloseDevice();
}
```

5.6.4.8 DO_WriteValue

The class has two overload methods for writing DO value. One provides specifying channel to write, another for all channel. These two overload methods are listed as following table and described in following section.

| Name of Methods |
|--|
| DO_WriteValue (BYTE i_byChannel, BYTE i_byValue) |
| DO_WriteValue (BYTE *i_byDOValue) |

5.6.4.8.1 DO_WriteValue (BYTE, BYTE)

Digital Output function - Write DO Value to specific channel. The value of the digital output is shown below.

| Value | Value |
|-------|-------|
| Off | 0 |
| On | 1 |

Syntax

```
public int DO_WriteValue(  
    BYTE i_byChannel  
    BYTE i_byValue  
)
```

Parameters

i_byChannel

[IN] The specific DO channel to be set.

i_byValue

[IN] The DO on / off bit.

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2064, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DO_WriteValue(5, 1))
        printf( "%d" , iErrCode);
    m_usbIO.CloseDevice();
}
```

5.6.4.8.2 DO_WriteValue (BYTE *)

Digital Output function - Write DO Value. Each bit represents channel value. The value of the digital output is shown below.

| Enable Bit | Value |
|------------|-------|
| Off | 0 |
| On | 1 |

Syntax

```
public int DO_WriteValue(  
    BYTE* i_byDOValue  
)
```

Parameters

*i_byDOValue

[IN] The DO value. Each bit represents the digital output value of each channel.

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte i_byDOValue[(USBIO_DO_MAX_CHANNEL + 7) / 8];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2064, 1)))
{
    memset(i_byDOValue, 0xFF, (USBIO_DO_MAX_CHANNEL + 7) / 8);
    if(ERR_NO_ERR != (iErrCode = m_usbIO.DO_WriteValue(i_byDOValue))
        printf( "%d" , iErrCode);
    m_usbIO.CloseDevice();
}
```

5.6.5 Analog Input

5.6.5.1 AI_GetTotalSupportType

Analog input function - Get total supported amount.

Syntax

```
public int AI_GetTotalSupportType (  
    BYTE *o_byTotalSupportType  
)
```

Parameters

*o_byTotalSupportType
[OUT] The number of total support type

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byTotalSupportType;
Byte o_bySupportTypeCode[USBIO_MAX_SUPPORT_TYPE];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetTotalSupportType (&o_byTotalSupportType)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetSupportTypeCode (o_bySupportTypeCode)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        printf( "%d\n" , o_byTotalSupportType);
        for(iIdx = 0; iIdx < o_byTotalSupportType; iIdx++)
            printf( "%02x\n" , o_bySupportTypeCode[iIdx]);
    }
}
```

5.6.5.2 AI_GetSupportTypeCode

Analog input function - Get supported type code Please refer to [Appendix A.1](#) of user's manual to map AI channels input type.

Syntax

```
public int AI_GetTotalSupportType (  
    BYTE *o_bySupportTypeCode  
)
```

Parameters

*o_byTotalSupportType
[OUT] The number of total support type

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byTotalSupportType;
Byte o_bySupportTypeCode[USBIO_MAX_SUPPORT_TYPE];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetTotalSupportType (&o_byTotalSupportType)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetSupportTypeCode (o_bySupportTypeCode)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        printf( "%d\n" , o_byTotalSupportType);
        for(iIdx = 0; iIdx < o_byTotalSupportType; iIdx++)
            printf( "%02x\n" , o_bySupportTypeCode[iIdx]);
    }
}
```


5.6.5.3 AI_GetTypeCode

Analog input function - Get type code Please refer to user's manual to map AI channels input type. The type code can reference to [Appendix A.1](#).

Syntax

```
public int AI_GetTypeCode (
    BYTE *o_byTypeCode
)
```

Parameters

*o_byTypeCode
[OUT] The byte array of type code

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byTypeCode [USBIO_AI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetTypeCode(o_byTypeCode)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < USBIO_AI_MAX_CHANNEL; iIdx++)
            printf( "%02x\n" , o_byTypeCode[iIdx]);
    }
}
```

5.6.5.4 AI_GetChCJCOffset

Analog input function - Get channel CJC offset The valid range of offset is -40.96 ~ +40.95.

Syntax

```
public int AI_GetChCJCOffset (  
    float *o_fChCJCOffset  
)
```

Parameters

*o_fChCJCOffset
[OUT] The float array of channel CJC offset

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
float o_fChCJOffset [USBIO_AI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO. AI_GetChCJOffset (o_fChCJOffset)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < USBIO_AI_MAX_CHANNEL; iIdx++)
            printf( "%.5f\n" , o_fChCJOffset [iIdx]);
    }
}
```

5.6.5.5 AI_GetChEnable

Analog input function - Get channel enable/disable. Each byte indicates 8 channels enable/disable mask. EX: Byte0 -> Channel0 ~ 7

Syntax

```
public int AI_GetChCJOffset (  
    BYTE *o_byChEnable  
)
```

Parameters

*o_byChEnable
[OUT] The byte array of channel enable/disable mask

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byChEnable [(USBIO_AI_MAX_CHANNEL + 7) / 8];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetChEnable (o_byChEnable)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < (USBIO_AI_MAX_CHANNEL + 7) / 8; iIdx++)
            printf( "%02x\n" , o_byChEnable [iIdx]);
    }
}
```

5.6.5.6 AI_GetFilterRejection

Analog input function - Get filter rejection.

| Rejection Setting | Value |
|-------------------|-------|
| 60Hz | 0 |
| 50Hz | 1 |

Syntax

```
public int AI_GetFilterRejection (  
    BYTE *o_byFilterRejection  
)
```

Parameters

*o_byFilterRejection
[OUT] The filter rejection

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byFilterRejection;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetFilterRejection (&o_byFilterRejection)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d\n" , o_byFilterRejection);  
}
```

5.6.5.7 AI_GetCJCOffset

Analog input function - Get CJC offset The valid range of offset is -40.96 ~ +40.95.

Syntax

```
public int AI_GetCJCOffset (  
    float *o_fCJCOffset  
)
```

Parameters

*o_fCJCOffset
[OUT] The CJC offset

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
float o_fCJCOffset;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetCJCOffset (&o_fCJCOffset)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%.5f\n" , o_fCJCOffset);  
}
```

5.6.5.8 AI_GetCJCEnable

Analog input function - Get CJC enable.

| Enable Setting | Value |
|----------------|-------|
| Disable | 0 |
| Enable | 1 |

Syntax

```
public int AI_GetCJCEnable (  
    BYTE *o_byCJCEnable  
)
```

Parameters

*o_byCJCEnable
[OUT] The CJC enable

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byCJCEnable;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetCJCEnable (&o_byCJCEnable)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d\n" , o_byCJCEnable);  
}
```


5.6.5.9 AI_GetWireDetectEnable

Analog input function - Get wire detect enable.

| Enable Setting | Value |
|----------------|-------|
| Disable | 0 |
| Enable | 1 |

Syntax

```
public int AI_GetWireDetectEnable (  
    BYTE *o_byWireDetectEnable  
)
```

Parameters

*o_byWireDetectEnable
[OUT] The wire detect enable

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byWireDetectEnable;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetWireDetectEnable (&o_byWireDetectEnable)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%d\n" , o_byWireDetectEnable);  
}
```

5.6.5.10 AI_GetResolution

Analog input function - Get resolution. Each byte indicates each channel real resolution.

Syntax

```
public int AI_GetResolution (  
    BYTE *o_byResolution  
)
```

Parameters

*o_byResolution
[OUT] The byte array of resolution for each channel

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte o_byResolution[USBIO_AI_MAX_CHANNEL];  
Int iIdx;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_GetResolution(o_byResolution)))  
        printf( "%d" , iErrCode);  
    else  
    {  
        For(iIdx = 0; iIdx < USBIO_AI_MAX_CHANNEL; iIdx++)  
            printf( "%d\n" , o_byResolution[iIdx]);  
    }  
}
```

5.6.5.11 AI_ReadValue

The class library provides 4 overload methods to read AI value. Two methods, the parameter in float format, will convert raw value to true inside the method. Others will return raw value without having conversion. The overview of these methods is as following table, and will describe in the following section.

| Name of Methods |
|---|
| AI_ReadValue (DWORD* o_dwAIValue) |
| AI_ReadValue (DWORD* o_dwAIValue, BYTE* o_byAIChStatus) |
| AI_ReadValue (float* o_fAIValue) |
| AI_ReadValue (float* o_fAIValue, BYTE* o_byAIChStatus) |

5.6.5.11.1 AI_ReadValue (DWORD *)

Analog input function - Read AI value in double word (digital) format.

In the digital format, the value represents the value from zero to full scale. Ex: For type -10V ~ +10V, the value 0x0 indicates -10V and 0xFFFF (16bit resolution) indicates +10V.

Please note that, when channel was not in good status, the reading value no longer represents zero to full scale. Different channel status follows the following rule:

- Channel Over
The reading value represents a sign value X indicates how many value over full scale range. This value can be calculated by following formula:
Assume current type is -10V ~ +10V with 16 bit resolution and reading value is 0x13E, then we can get the actual value Y is $Y = \left(1 + \frac{0X13E}{0xFFFF}\right) \times (10 - (-10)) + (-10)$
- Channel Under
The reading value represents a sign value X indicates how many value under zero scale range. This value can be calculated by following formula:
Assume current type is -5V ~ +5V with 16 bit resolution and reading value is 0x53E, then we can get the actual value Y is $Y = \left(0 - \frac{0X53E}{0xFFFF}\right) \times (5 - (-5)) + (-5)$
- Channel Open & Channel Close
The reading value of these two statuses will be the full scale for channel open and zero scale for channel close.

The overload API for only reading AI value cannot detect the channel status. It only read the AI value but has the most efficiency.

Syntax

```
public int AI_ReadValue (
    DWORD *o_dwAIValue
)
```

Parameters

*o_dwAIValue
[OUT] The raw value of AI value

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
DWORD o_dwAIValue[USBIO_AI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_ReadValue(o_dwAIValue)))
        printf( "%d" , iErrCode);
    else
    {
        For(iIdx = 0; iIdx < USBIO_AI_MAX_CHANNEL; iIdx++)
            printf( "0x%08x\n" , o_dwAIValue[iIdx]);
    }
}
```

5.6.5.11.2 AI_ReadValue (DWORD *, BYTE*)

Analog input function - Read AI value in double word (digital) format.

In the digital format, the value represents the value from zero to full scale. Ex: For type -10V ~ +10V, the value 0x0 indicates -10V and 0xFFFF (16bit resolution) indicates +10V.

Please note that, when channel was not in good status, the reading value no longer represents zero to full scale. Different channel status follows the following rule:

- Channel Over

The reading value represents a sign value X indicates how many value over full scale range. This value can be calculated by following formula:

Assume current type is -10V ~ +10V with 16 bit resolution and reading value is

0x13E, then we can get the actual value Y is $Y = \left(1 + \frac{0X13E}{0xFFFF}\right) \times (10 - (-10)) + (-10)$

- Channel Under

The reading value represents a sign value X indicates how many value under zero scale range. This value can be calculated by following formula:

Assume current type is -5V ~ +5V with 16 bit resolution and reading value is 0x53E,

then we can get the actual value Y is $Y = \left(0 - \frac{0X53E}{0xFFFF}\right) \times (5 - (-5)) + (-5)$

- Channel Open & Channel Close

The reading value of these two statuses will be the full scale for channel open and zero scale for channel close.

Syntax

```
public int AI_ReadValue (
    DWORD *o_dwAIValue
    BYTE* o_byAIChStatus
)
```

Parameters

*o_dwAIValue

[OUT] The raw value of AI value

*o_byAIChStatus

[OUT] The byte array of channel status

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
DWORD o_dwAIValue[USBIO_AI_MAX_CHANNEL];
Byte o_byAIChStatus[USBIO_AI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO. AI_ReadValue(o_dwAIValue, o_byAIChStatus)))
        printf( "%d" , iErrCode);
    else
    {
        For(iIdx = 0; iIdx < USBIO_AI_MAX_CHANNEL; iIdx++)
            printf( "0x%08x, 0x%02x\n" , o_dwAIValue[iIdx], o_byAIChStatus);
    }
}
```

5.6.5.11.3 AI_ReadValue (float *)

Analog input function - Read the real AI value without channel status.

The reading value is calculated, users no need to convert it to real value for current input type. Ex: The reading value is 1.316 in -2.5 ~ +2.5V, the input signal is 1.316V.

Syntax

```
public int AI_ReadValue (  
    float *o_fAIValue  
)
```

Parameters

| |
|----------------------------------|
| *o_fAIValue |
| [OUT] The true value of AI value |

Return Value

| |
|------------|
| Error code |
|------------|

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
float o_fAIValue[USBIO_AI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO. AI_ReadValue(o_fAIValue)))
        printf( "%d" , iErrCode);
    else
    {
        For(iIdx = 0; iIdx < USBIO_AI_MAX_CHANNEL; iIdx++)
            printf( "%.5f\n" , o_dwAIValue[iIdx]);
    }
}
```

5.6.5.11.4 AI_ReadValue (float *, BYTE*)

Analog input function - Read the real AI value with channel status.

Syntax

```
public int AI_ReadValue (  
    float *o_fAIValue  
    BYTE* o_byAIChStatus  
)
```

Parameters

*o_fAIValue

[OUT] The true value of AI value

*o_byAIChStatus

[OUT] The byte array of channel status

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
float o_fAIValue[USBIO_AI_MAX_CHANNEL];
Byte o_byAIChStatus[USBIO_AI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_ReadValue(o_fAIValue, o_byAIChStatus)))
        printf( "%d" , iErrCode);
    else
    {
        For(iIdx = 0; iIdx < USBIO_AI_MAX_CHANNEL; iIdx++)
            printf( "%.5f, 0x%02x\n" , o_fAIValue[iIdx], o_byAIChStatus);
    }
}
```

5.6.5.12 AI_ReadBulkValue

Analog input function – Trigger reading bulk AI value (Fast acquire functionality).

When in callback operation, it will cause the performance in your callback function.

Please reduce execute time in this callback function.

The detail of operation is described as follow. When call this API, the AI module operation will be changed from normal to fast acquire mode. In fast acquire mode, AI module follow the parameter of API setting to acquire data.

The API has block and non-block operation. In block operation, user' s application needs to wait until API finishing all procedure. In contrast with block mode, non-block provides a flexible way for user. In non-block operation, user' s application can proceed to own other code. To enable non-block operation, it is important to declare a callback function and pass it through last parameter. For block operation, just pass a NULL definition in last parameter.

Due to the USB 2.0 Full-speed transfer rate capability, the maximum sample rate is 10 KHz.

Syntax

```
public int AI_ReadBulkValue (  
    BYTE i_byStartCh,  
    BYTE i_byChTotal,  
    DWORD i_dwSampleWidth,  
    Float i_fSampleRate,  
    DWORD i_dwBufferWidth,  
    DWORD *o_dwDataBuffer,  
    OnBulkValueFinishEvent i_CBFunc  
)
```

Parameters

i_byStartCh
[IN] The starting acquire channel

i_byChTotal
[IN] The total channels to acquire

i_dwSampleWidth
[IN] The sampling width (ms)

i_fSampleRate
[IN] The sampling rate (Hz). 10KHz maximum.

i_dwBufferWidth
[IN] The width of the buffer for single channel

*o_dwDataBuffer
[OUT] The 2-dimension buffer array to store

i_CBFunc
[IN] Block operation – NULL
[IN] Non-block operation - The address of callback function.

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;

// To read 0~1 channel for 100ms in 5 KHz sample rate each channel in non-block operation
// So we have the following variable declaration
#define SampleRate 5000
#define BufferWidth 500; // 5000(Hz) * 0.1(100ms)
DWORD m_dwBuffer[2][BufferWidth];

Void BulkFinishCallback(DWORD dwCount)
{
    // Callback function to handle data
}

Int main()
{
    m_usbIO = new ICPDAS_USBIO();
    if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
    {
        if(ERR_NO_ERR != (iErrCode = m_usbIO. AI_ReadBulkValue(0,
                                                                2,
                                                                100,
                                                                SampleRate,
                                                                BufferWidth
                                                                m_dwBuffer,
                                                                BulkFinishCallback)))

            printf( "%d" , iErrCode);

        while(1) {Sleep(1);}
    }
}
```

5.6.5.13 AI_ReadCJCValue

Analog input function - Read the current CJC value on the module.

Syntax

```
public int AI_ReadCJCValue (  
    float *o_fCJCValue  
)
```

Parameters

*o_fCJCValue
[OUT] The CJC value

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
float o_fCJCValue;  
Int iIdx;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_ReadCJCValue(o_fCJCValue)))  
        printf( "%d" , iErrCode);  
    else  
        printf( "%.5f\n" , o_fCJCValue);  
}
```

5.6.5.14 AI_SetTypeCode

The class has two overload methods for setting type code. One provides specifying channel to set, another for all channel. Please refer to user's manual for analog input type code. These two overload methods are listed as following table and described in following section. The corresponding type code can be found in [Appendix A.1](#).

| Name of Methods |
|--|
| AI_SetTypeCode (BYTE i_byChToSet, BYTE i_byTypeCode) |
| AI_SetTypeCode (BYTE *i_byTypeCodes) |

5.6.5.14.1 AI_SetTypeCode (BYTE, BYTE)

Analog input function - Set type code for specific channel. The type code can reference to [Appendix A.1](#).

Syntax

```
public int AI_SetTypeCode (  
    BYTE i_byChToSet,  
    BYTE i_byTypeCode  
)
```

Parameters

i_byChToSet

[IN] The specific channel to set

i_byTypeCode

[IN] The type code for the specific channel

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_SetTypeCode(0, 0x10)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.5.14.2 AI_SetTypeCode (BYTE*)

Analog input function - Set type code for all channels. The type code can reference to [Appendix A.1](#).

Syntax

```
public int AI_SetTypeCode (
    BYTE *i_byTypeCodes
)
```

Parameters

*i_byTypeCodes
[IN] The byte array of type code to set

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte m_byChTypeCode[USBIO_AI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    For(iIdx = 0; iIdx < USBIO_AI_MAX_CHANNEL; iIdx)
        m_byChTypeCode[iIdx] = 0x10;
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_SetTypeCode(m_byChTypeCode)))
        printf( "%d" , iErrCode);
    iErrCode = m_usbIO.CloseDevice();
}
```

5.6.5.15 AI_SetChCJCOffset

The class has two overload methods for setting channel CJC offset. One provides specifying channel to set, another for all channel. The valid range of offset is -40.96 ~ +40.95. These two overload methods are listed as following table and described in following section.

| Name of Methods |
|--|
| AI_SetChCJCOffset (BYTE i_byChToSet, float i_fChCJCOffset) |
| AI_SetChCJCOffset (float *i_fChCJCOffsets) |

5.6.5.15.1 AI_SetChCJCOffset (BYTE, float)

Analog input function - Set channel CJC offset for specific channel.

Syntax

```
public int AI_SetTypeCode (  
    BYTE i_byChToSet,  
    float i_fChCJCOffset  
)
```

Parameters

i_byChToSet

[IN] The specific channel to set

i_fChCJCOffset

[IN] The CJC offset for the specific channel

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_SetChCJCOffset(0, 1.354)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.5.15.2 AI_SetChCJCOffset (float*)

Analog input function - Set channel CJC offset for specific channel.

Syntax

```
public int AI_SetTypeCode (
    float* i_fChCJCOffset
)
```

Parameters

*i_fChCJCOffset
[IN] The float array of channel CJC offset to set

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
float m_fChCJCOffset[USBIO_AI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))
{
    For(iIdx = 0; iIdx < USBIO_AI_MAX_CHANNEL; iIdx)
        m_fChCJCOffset[iIdx] = 1.358;
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_SetChCJCOffset(m_fChCJCOffset)))
        printf( "%d" , iErrCode);
    iErrCode = m_usbIO.CloseDevice();
}
```

5.6.5.16 AI_SetChEnable

Analog input function - Set channel enable/disable. Each byte indicates 8 channels enable/disable mask. Ex: Byte0 -> Channel0 ~ 7

Syntax

```
public int AI_SetChEnable (  
    BYTE *i_byChEnable  
)
```

Parameters

*i_byChEnable
[IN] The byte array of channel enable/disable mask

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte m_byChEnable[(USBIO_AI_MAX_CHANNEL + 7) / 8];  
Int iIdx;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    For(iIdx = 0; iIdx < (USBIO_AI_MAX_CHANNEL + 7) / 8; iIdx)  
        m_byChEnable[iIdx] = 0x5A;  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_SetChEnable(m_byChEnable)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.5.17 AI_SetFilterRejection

Analog input function - Set filter rejection.

| Rejection Setting | Value |
|-------------------|-------|
| 60Hz | 0 |
| 50Hz | 1 |

Syntax

```
public int AI_SetFilterRejection (  
    BYTE i_byFilterRejection  
)
```

Parameters

i_byFilterRejection

[IN] The filter rejection

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_SetFilterRejection(0)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.5.18 AI_SetCJCOffset

Analog input function - Set CJC offset. The valid range of offset is -40.96 ~ +40.95.

Syntax

```
public int AI_SetCJCOffset (  
    float i_fCJCOffset  
)
```

Parameters

i_fCJCOffset
[IN] The CJC offset

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_SetCJCOffset(-20.81)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```


5.6.5.19 AI_SetCJCEnable

Analog input function - Set CJC enable.

| Enable Setting | Value |
|----------------|-------|
| Disable | 0 |
| Enable | 1 |

Syntax

```
public int AI_SetCJCOffset (  
    BYTE i_byCJCEnable  
)
```

Parameters

i_byCJCEnable
[IN] The CJC enable

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_SetCJCEnable(1)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.5.20 AI_SetWireDetectEnable

Analog input function - Set wire detect enable.

| Enable Setting | Value |
|----------------|-------|
| Disable | 0 |
| Enable | 1 |

Syntax

```
public int AI_SetCJCOffset (  
    BYTE i_byWireDetectEnable  
)
```

Parameters

i_byWireDetectEnable
[IN] The wire detect enable

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2019, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.AI_SetWireDetectEnable(0)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.6 Pulse Input

5.6.6.1 PI_GetTotalSupportType

Pulse input function - Get total supported amount.

Syntax

```
public int PI_GetTotalSupportType (  
    BYTE * o_byTotalSupportType  
)
```

Parameters

* o_byTotalSupportType
[OUT] The number of total support type

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byTotalSupportType;
Byte o_bySupportTypeCode[USBIO_MAX_SUPPORT_TYPE];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_GetTotalSupportType (&o_byTotalSupportType)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_GetSupportTypeCode (o_bySupportTypeCode)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        printf( "%d\n" , o_byTotalSupportType);
        for(iIdx = 0; iIdx < o_byTotalSupportType; iIdx++)
            printf( "%02x\n" , o_bySupportTypeCode[iIdx]);
    }
}
```

5.6.6.2 PI_GetSupportTypeCode

Pulse input function - Get supported type code. Please refer to [Appendix A.3](#) of user's manual to map PI channels input type.

Syntax

```
public int PI_GetTotalSupportType (  
    BYTE *o_bySupportTypeCode  
)
```

Parameters

```
*o_byTotalSupportType  
    [OUT] The number of total support type
```

Return Value

```
Error code
```

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byTotalSupportType;
Byte o_bySupportTypeCode[USBIO_MAX_SUPPORT_TYPE];
Int iIdx;
Bool bRet = true;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_GetTotalSupportType (&o_byTotalSupportType)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_GetSupportTypeCode (o_bySupportTypeCode)))
    {
        printf( "%d" , iErrCode);
        bRet = false;
    }
    If(bRet)
    {
        printf( "%d\n" , o_byTotalSupportType);
        for(iIdx = 0; iIdx < o_byTotalSupportType; iIdx++)
            printf( "%02x\n" , o_bySupportTypeCode[iIdx]);
    }
}
```

5.6.6.3 PI_GetTypeCode

Pulse input function - Get type code. Please refer to user's manual to map PI channels input type. The type code can reference to [Appendix A.3](#).

Syntax

```
public int PI_GetTypeCode (  
    BYTE *o_byTypeCode  
)
```

Parameters

*o_byTypeCode
[OUT] The byte array of type code

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byTypeCode [USBIO_PI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_GetTypeCode(o_byTypeCode)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < USBIO_PI_MAX_CHANNEL; iIdx++)
            printf( "%02x\n" , o_byTypeCode[iIdx]);
    }
}
```


5.6.6.4 PI_GetTriggerMode

Pulse input function - Get trigger mode

| Trigger Mode | Code |
|--------------|-------|
| Falling edge | 0 |
| Rising edge | 1 |
| Both edge | 2 & 3 |

Syntax

```
public int PI_GetTriggerMode (  
    BYTE *o_byTriggerMode  
)
```

Parameters

*o_byTriggerMode
[OUT] The byte array of trigger mode

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byTriggerMode [USBIO_PI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_GetTriggerMode(o_byTriggerMode)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < USBIO_PI_MAX_CHANNEL; iIdx++)
            printf( "%02x\n" , o_byTriggerMode[iIdx]);
    }
}
```

5.6.6.5 PI_GetChIsolatedFlag

Pulse input function - Get channel isolated flag. Each byte indicates 8 channels flag. EX:
Byte0 -> Channel0 ~ 7.

Syntax

```
public int PI_GetChIsolatedFlag (  
    BYTE *o_byChIsolatedFlag  
)
```

Parameters

*o_byChIsolatedFlag
[OUT] The byte arrays of channel isolated flag

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byChIsolatedFlag [(USBIO_PI_MAX_CHANNEL + 7) / 8];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_GetChIsolatedFlag(o_byChIsolatedFlag)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < (USBIO_PI_MAX_CHANNEL + 7) / 8; iIdx++)
            printf( "%02x\n" , o_byChIsolatedFlag[iIdx]);
    }
}
```

5.6.6.6 PI_GetLPFilterEnable

Pulse input function - Get low-pass filter enable. Each byte indicates 8 channels enable/disable mask. EX: Byte0 -> Channel0 ~ 7.

Syntax

```
public int PI_GetLPFilterEnable (  
    BYTE * o_byLPFilterEnable  
)
```

Parameters

* o_byLPFilterEnable
[OUT] The byte array of the low-pass filter enable mask

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte o_byLPFilterEnable [(USBIO_PI_MAX_CHANNEL + 7) / 8];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_GetLPFilterEnable(o_byLPFilterEnable)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < (USBIO_PI_MAX_CHANNEL + 7) / 8; iIdx++)
            printf( "%02x\n" , o_byLPFilterEnable[iIdx]);
    }
}
```

5.6.6.7 PI_GetLPFilterWidth

Pulse input function - Get low-pass filter width. The unit of the width is uS. The maximum value of width is 32767uS.

Note: Each channel does not use own low-pass filter width. Please refer to following table to see what low-pass filter width is referred to.

| Channel Index | Set |
|---------------|-----|
| 0 & 1 | 0 |
| 2 & 3 | 1 |
| 4, 5, 6, 7 | 2 |

Syntax

```
public int PI_GetLPFilterWidth (  
    WORD *o_wLPFilterWidth  
)
```

Parameters

*o_wLPFilterWidth

[OUT] The byte array of the low-pass filter width in uS

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
WORD o_wLPFilterWidth [USBIO_PI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_GetLPFilterWidth(o_wLPFilterWidth)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < USBIO_PI_MAX_CHANNEL; iIdx++)
            printf( "%d\n" , o_wLPFilterWidth[iIdx]);
    }
}
```


5.6.6.8 PI_ReadValue

Pulse input function - Get PI value in double-word format. This method provides two formats in a function call.

NOTE: If the type of the channel is frequency, users have to convert these 4 bytes into float format.

Syntax

```
public int PI_ReadValue (  
    DWORD *o_dwPIValue  
    BYTE *o_byChStatus  
)
```

Parameters

*o_dwPIValue

[OUT] The byte array of the PI channel counter value

*o_byChStatus

[OUT] The byte array of the channel status

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
DWORD o_dwPIValue[USBIO_PI_MAX_CHANNEL];
BYTE o_byChStatus[USBIO_PI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_ReadValue(o_dwPIValue, o_byChStatus)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < USBIO_PI_MAX_CHANNEL; iIdx++)
            printf( "%d\n" , o_dwPIValue[iIdx]);
    }
}
```

5.6.6.9 PI_ReadCntValue

Pulse input function - Read PI value in double-word format. This method reads the all counter value of channels.

NOTE: If the channel is in the type of frequency. The value of the related channel of the o_dwCntValue will be 0, and the value of the related channels of o_byChStatus will indicate the type not support.

Syntax

```
public int PI_ReadValue (  
    DWORD *o_dwCntValue  
    BYTE *o_byChStatus  
)
```

Parameters

*o_dwCntValue
 [OUT] The unsigned long array of the PI channel counter value

*o_byChStatus
 [OUT] The byte array of the channel status

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
DWORD o_dwCntValue[USBIO_PI_MAX_CHANNEL];
BYTE o_byChStatus[USBIO_PI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_ReadCntValue(o_dwCntValue, o_byChStatus)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < USBIO_PI_MAX_CHANNEL; iIdx++)
            printf( "%d\n" , o_dwCntValue[iIdx]);
    }
}
```

5.6.6.10 PI_ReadFreqValue

Pulse input function - Read the frequency value. This method reads the all frequency value of channels.

NOTE: If the channel is not in the type of frequency. The value of the related channel of the o_dwCntValue will be -1, and the value of the related channels of o_byChStatus will indicate the type not support.

Syntax

```
public int PI_ReadValue (  
    float *o_fFreqValue  
    BYTE *o_byChStatus  
)
```

Parameters

*o_fFreqValue
[OUT] The float array of the PI channel frequency value

*o_byChStatus
[OUT] The byte array of the channel status

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
float o_fFreqValue[USBIO_PI_MAX_CHANNEL];
BYTE o_byChStatus[USBIO_PI_MAX_CHANNEL];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_ReadValue(o_fFreqValue, o_byChStatus)))
        printf( "%d" , iErrCode);
    else
    {
        for(iIdx = 0; iIdx < USBIO_PI_MAX_CHANNEL; iIdx++)
            printf( "%f\n" , o_fFreqValue[iIdx]);
    }
}
```

5.6.6.11 PI_ReadBulkValue

Analog input function – Trigger reading bulk PI value (Fast acquire functionality).

When in callback operation, it will cause the performance in your callback function.

Please reduce execute time in this callback function.

The detail of operation is described as follow. When call this API, the PI module operation will be changed from normal to fast acquire mode. In fast acquire mode, PI module follow the parameter of API setting to acquire data.

The API has block and non-block operation. In block operation, user' s application needs to wait until API finishing all procedure. In contrast with block mode, non-block provides a flexible way for user. In non-block operation, user' s application can proceed to own other code. To enable non-block operation, it is important to declare a callback function and pass it through last parameter. For block operation, just pass a NULL definition in last parameter.

Due to the USB 2.0 Full-speed transfer rate capability, the maximum sample rate is 10 KHz.

Syntax

```
public int PI_ReadBulkValue (
    BYTE i_byStartCh,
    BYTE i_byChTotal,
    DWORD i_dwSampleWidth,
    Float i_fSampleRate,
    DWORD i_dwBufferWidth,
    DWORD *o_dwDataBuffer,
    OnBulkValueFinishEvent i_CBFunc
)
```

Parameters

i_byStartCh
[IN] The starting acquire channel

i_byChTotal
[IN] The total channels to acquire

i_dwSampleWidth
[IN] The sampling width (ms)

i_fSampleRate
[IN] The sampling rate (Hz). 10KHz maximum.

i_dwBufferWidth
[IN] The width of the buffer for single channel

***o_dwDataBuffer**
[OUT] The 2-dimension buffer array to store

i_CBFunc
[IN] Block operation – NULL
[IN] Non-block operation - The address of callback function.

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;

// To read 0~1 channel for 100ms in 5 KHz sample rate each channel in non-block operation
// So we have the following variable declaration
#define SampleRate 5000
#define BufferWidth 500; // 5000(Hz) * 0.1(100ms)
DWORD m_dwBuffer[2][BufferWidth];

Void BulkFinishCallback(DWORD dwCount)
{
    // Callback function to handle data
}

Int main()
{
    m_usbIO = new ICPDAS_USBIO();
    if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
    {
        if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_ReadBulkValue(0,
                                                            2,
                                                            100,
                                                            SampleRate,
                                                            BufferWidth
                                                            m_dwBuffer,
                                                            BulkFinishCallback)))

            printf( "%d" , iErrCode);

        while(1) {Sleep(1);}
    }
}
```

5.6.6.12 PI_SetTypeCode

The class has two overload methods for setting type code. One provides specifying channel to set, another for all channels. Please refer to user's manual for pulse input type code. These two overload methods are listed as following table and described in following section. The corresponding type code can be found in [Appendix A.3](#).

| Name of Methods |
|--|
| PI_SetTypeCode (BYTE i_byChToSet, BYTE i_byTypeCode) |
| PI_SetTypeCode (BYTE *i_byTypeCodes) |

5.6.6.12.1 PI_SetTypeCode (BYTE, BYTE)

Pulse input function - Set type code for specific channel. The type code can reference to [Appendix A.3](#).

Syntax

```
public int PI_SetTypeCode (  
    BYTE i_byChToSet,  
    BYTE i_byTypeCode  
)
```

Parameters

i_byChToSet

[IN] The specific channel to set

i_byTypeCode

[IN] The type code for the specific channel

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_SetTypeCode(0, 0x10)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.6.12.2 PI_SetTypeCode (BYTE*)

Analog input function - Set type code for all channels. The type code can reference to [Appendix A.3](#).

Syntax

```
public int PI_SetTypeCode (  
    BYTE *i_byTypeCodes  
)
```

Parameters

*i_byTypeCodes
[IN] The byte array of type code to set

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte m_byChTypeCode[USBIO_PI_MAX_CHANNEL];  
Int iIdx;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    For(iIdx = 0; iIdx < USBIO_PI_MAX_CHANNEL; iIdx)  
        m_byChTypeCode[iIdx] = 0x50;  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_SetTypeCode(m_byChTypeCode)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.6.13 PI_ClearChCount

Pulse input function - Clear channel count with clear mask. Each byte indicates 8 channels clear mask, set for channel clear. Ex: Byte0 -> Channel0 ~ 7

Syntax

```
public int PI_ClearChCount (
    BYTE *i_byClrMask
)
```

Parameters

*i_byClrMask
[IN] The byte array of channel count clear mask

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;
Byte m_byChClrMask[(USBIO_PI_MAX_CHANNEL + 7) / 8];
Int iIdx;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    For(iIdx = 0; iIdx < (USBIO_PI_MAX_CHANNEL + 7) / 8; iIdx)
        m_byChClrMask[iIdx] = 0x5A;
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_ClearChCount(m_byChClrMask)))
        printf( "%d" , iErrCode);
    iErrCode = m_usbIO.CloseDevice();
}
```

5.6.6.14 PI_ClearSingleChCount

Pulse input function - Clear specific channel count.

Syntax

```
public int PI_ClearSingleChCount (
    BYTE i_byChToClr
)
```

Parameters

i_byChToClr
[IN] The channel index for clearing

Return Value

Error code

Example

```
Int iErrCode
ICPDAS_USBIO m_usbIO;

m_usbIO = new ICPDAS_USBIO();
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))
{
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_ClearSingleChCount(7)))
        printf( "%d" , iErrCode);
    iErrCode = m_usbIO.CloseDevice();
}
```

5.6.6.15 PI_ClearChStatus

Pulse input function - Clear channel status with clear mask. Each byte indicates 8 channels clear mask, set for channel clear. Ex: Byte0 -> Channel0 ~ 7

Syntax

```
public int PI_ClearChStatus(  
    BYTE *i_byClrMask  
)
```

Parameters

*i_byClrMask
[IN] The byte array of channel status clear mask

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte m_byChClrMask[(USBIO_PI_MAX_CHANNEL + 7) / 8];  
Int iIdx;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    For(iIdx = 0; iIdx < (USBIO_PI_MAX_CHANNEL + 7) / 8; iIdx)  
        m_byChClrMask[iIdx] = 0x5A;  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_ClearChStatus(m_byChClrMask)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.6.16 PI_ClearSingleChStatus

Pulse input function - Clear specific channel status.

Syntax

```
public int PI_ClearSingleChStatus(  
    BYTE i_byChToClr  
)
```

Parameters

i_byChToClr
[IN] The channel index for clearing

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_ClearSingleChStatus(7)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```


5.6.6.17 PI_SetTriggerMode

The class has two overload methods for setting trigger mode. One provides specifying channel to set, another for all channels.

The trigger mode is shown as following table.

| Trigger Mode | Code |
|--------------|-------|
| Falling edge | 0 |
| Rising edge | 1 |
| Both edge | 2 & 3 |

These two overload methods are listed as following table and described in following section.

| Name of Methods |
|---|
| PI_SetTriggerMode (BYTE i_byChToSet, BYTE i_byTypeCode) |
| PI_SetTriggerMode (BYTE *i_byTypeCodes) |

5.6.6.17.1 PI_SetTriggerMode (BYTE, BYTE)

Pulse input function - Set trigger mode to specific channel.

Syntax

```
public int PI_SetTriggerMode (  
    BYTE i_byChToSet,  
    BYTE i_byTriggerMode  
)
```

Parameters

i_byChToSet

[IN] The specific channel to set

i_byTriggerMode

[IN] The type code for the specific channel

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_SetTriggerMode(0, 0x1)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.6.17.2 PI_SetTriggerMode (BYTE*)

Pulse input function - Set trigger mode to all channel.

Syntax

```
public int PI_SetTriggerMode (  
    BYTE *i_byTriggerMode  
)
```

Parameters

*i_byTriggerMode
[IN] The byte array of trigger mode to set

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte m_byChTriggerMode[USBIO_PI_MAX_CHANNEL];  
Int iIdx;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    For(iIdx = 0; iIdx < USBIO_PI_MAX_CHANNEL; iIdx)  
        m_byChTriggerMode[iIdx] = 0x2;  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_SetTriggerMode(m_byChTriggerMode)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.6.18 PI_SetChIsolatedFlag

The class has two overload methods for setting channel isolated flag. One provides specifying channel to set, the other for all channels. Set 1 for setting channel to isolated. The parameter of the method for all channels is constructed in byte array for all channel isolated flag, ex: Byte0 -> Channel0 ~ 7.

These two overload methods are listed as following table and described in following section.

| Name of Methods |
|--|
| PI_SetChIsolatedFlag (BYTE i_byChToSet, BOOL i_bChIsolatedFlag) |
| PI_SetChIsolatedFlag (BYTE *i_byChIsolatedFlags) |

5.6.6.18.1 PI_SetChIsolatedFlag (BYTE, BOOL)

Pulse input function - Set channel isolated flag.

Syntax

```
public int PI_SetChIsolatedFlag (  
    BYTE i_byChToSet,  
    BOOL i_bChIsolatedFlag  
)
```

Parameters

i_byChToSet

[IN] The specific channel to set

i_bChIsolatedFlag

[IN] The isolated flag for the specific channel

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_SetChIsolatedFlag(5, 0x1)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.6.18.2 PI_SetChIsolatedFlag (BYTE*)

Pulse input function - Set channel isolated flag to all channels.

Syntax

```
public int PI_SetChIsolatedFlag (  
    BYTE *i_byChIsolatedFlags  
)
```

Parameters

*i_byChIsolatedFlags
[IN] The byte arrays of channel isolated flag.

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte m_byChIsolatedFlags[(USBIO_PI_MAX_CHANNEL + 7) / 8];  
Int iIdx;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    For(iIdx = 0; iIdx < (USBIO_PI_MAX_CHANNEL + 7) / 8; iIdx)  
        m_byChIsolatedFlag[iIdx] = 0x5a;  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_SetChIsolatedFlag(m_byChIsolatedFlag)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.6.19 PI_SetLPFilterEnable

The class has two overload methods for setting trigger mode. One provides specifying channel to set, another for all channels. Set 1 to enable low-pass filter. The parameter of the method for all channels is a byte array for all channel enable mask, ex: Byte0 -> Channel0 ~ 7.

These two overload methods are listed as following table and described in following section.

| Name of Methods |
|---|
| PI_SetLPFilterEnable (BYTE i_byChToSet, BOOL i_bLPFilterEnable) |
| PI_SetLPFilterEnable (BYTE *i_byLPFilterEnable) |

5.6.6.19.1 PI_SetLPFilterEnable (BYTE, BOOL)

Pulse input function - Set low-pass filter enable to specific channel.

Syntax

```
public int PI_SetLPFilterEnable (  
    BYTE i_byChToSet,  
    BOOL i_bLPFilterEnable  
)
```

Parameters

i_byChToSet

[IN] The specific channel to set

i_bLPFilterEnable

[IN] The enable flag for the specific channel

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_SetLPFilterEnable(5, 0x1)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```


5.6.6.19.2 PI_SetLPFilterEnable (BYTE*)

Pulse input function - Set low-pass filter enable to all channel.

Syntax

```
public int PI_SetLPFilterEnable (  
    BYTE *i_byLPFilterEnable  
)
```

Parameters

*i_byLPFilterEnable

[IN] The byte array of low-pass filter enable mask.

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte m_byLPFilterEnable[(USBIO_PI_MAX_CHANNEL + 7) / 8];  
Int iIdx;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    For(iIdx = 0; iIdx < (USBIO_PI_MAX_CHANNEL + 7) / 8; iIdx)  
        m_byLPFilterEnable[iIdx] = 0x5a;  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_SetLPFilterEnable(m_byLPFilterEnable)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.6.20 PI_SetLPFilterWidth

The class has two overload methods for setting trigger mode. One provides specifying channel to set, another for all channels. The low-pass filter width is for filtering noise or bouncing. The unit of the filter width is uS.

These two overload methods are listed as following table and described in following section.

| Name of Methods |
|---|
| PI_SetLPFilterWidth (BYTE i_byChToSet, WORD i_wLPFilterWidth) |
| PI_SetLPFilterWidth (WORD *i_wLPFilterWidths) |

5.6.6.20.1 PI_SetLPFilterEnable (BYTE, WORD)

Pulse input function - Set low-pass filter width

Syntax

```
public int PI_SetLPFilterWidth (  
    BYTE i_byChToSet,  
    BOOL i_wLPFilterWidth  
)
```

Parameters

i_byChToSet

[IN] The specific channel to set

i_wLPFilterWidth

[IN] The low-pass filter width. (uS)

Return Value

Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_SetLPFilterWidth(5, 10000)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

5.6.6.20.2 PI_SetLPFilterEnable (BYTE*)

Pulse input function - Set low-pass filter enable to all channel.

Syntax

```
public int PI_SetLPFilterEnable (  
    BYTE *i_byLPFilterEnable  
)
```

Parameters

*i_byLPFilterEnable

[IN] The byte array of low-pass filter enable mask.

Return Value


Error code

Example

```
Int iErrCode  
ICPDAS_USBIO m_usbIO;  
Byte m_byLPFilterWidth[USBIO_PI_MAX_CHANNEL];  
Int iIdx;  
  
m_usbIO = new ICPDAS_USBIO();  
if(ERR_NO_ERR == (iErrCode = m_usbIO.OpenDevice(USB2084, 1)))  
{  
    For(iIdx = 0; iIdx < USBIO_PI_MAX_CHANNEL; iIdx)  
        m_byLPFilterEnable[iIdx] = 20000;  
    if(ERR_NO_ERR != (iErrCode = m_usbIO.PI_SetLPFilterWidth(m_byLPFilterWidth)))  
        printf( "%d" , iErrCode);  
    iErrCode = m_usbIO.CloseDevice();  
}
```

6 Troubleshooting

1. Cannot install ICP DAS USB I/O package with the message like the following figure.

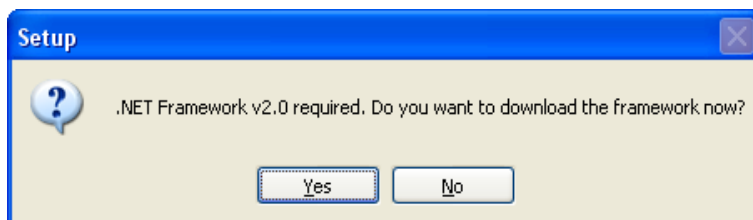

Because the ICP DAS USB I/O requires .NET Framework v2.0, the package will automatically detect the .NET Framework v2.0 installed as well or not. Users can click "Yes" to download and install the .NET Framework v2.0 via internet. If users can not access internet, the other way is install .NET Framework v2.0 in the folder "net_framework " in the root path of the CD.

2. **Returning timeout error code (65792) when access USB I/O.**

There are some possible reasons:

- The USB module connected to USB hub not local USB port on computer. This will cause the time for communication increased. To prevent this error, users can increase the time of communication timeout.
(Note: We strongly recommended connecting USB modules to local USB port on computer to prevent unexpected problem.)
- Module is failure caused by unknown reason. You can refer to LED indicators section.

Appendix A

A.1 Analog Input Type Code

| Code | Input Type | Code | Input Type |
|------|---------------------------|------|--|
| 0x00 | -15 mV ~ +15 mV | 0x17 | Type L TC, -200 ~ +800°C |
| 0x01 | -50 mV ~ + 50 mV | 0x18 | Type M TC, -200 ~ +100°C |
| 0x02 | -100 mV ~ +100 mV | 0x19 | Type L _{DIN43710} TC, -200 ~ +900°C |
| 0x03 | -500 mV ~ +500 mV | 0x1A | 0 ~ +20 mA |
| 0x04 | -1 V ~ +1 V | 0x1B | -150 V ~ +150 V |
| 0x05 | -2.5 V ~ +2.5 V | 0x1C | -50 V ~ +50 V |
| 0x06 | -20 mA ~ +20 mA | 0x20 | Pt 100, $\alpha=.00385$, -100 ~ +100°C |
| 0x07 | +4 mA ~ +20 mA | 0x21 | Pt 100, $\alpha=.00385$, 0 ~ +100°C |
| 0x08 | -10 V ~ +10 V | 0x22 | Pt 100, $\alpha=.00385$, 0 ~ +200°C |
| 0x09 | -5 V ~ +5 V | 0x23 | Pt 100, $\alpha=.00385$, 0 ~ +600°C |
| 0x0A | -1 V ~ +1 V | 0x24 | Pt 100, $\alpha=.003916$, -100 ~ +100°C |
| 0x0B | -500 mV ~ +500 mV | 0x25 | Pt 100, $\alpha=.003916$, 0 ~ +100°C |
| 0x0C | -150 mV ~ +150 mV | 0x26 | Pt 100, $\alpha=.003916$, 0 ~ +200°C |
| 0x0D | -20 mA ~ +20 mA | 0x27 | Pt 100, $\alpha=.003916$, 0 ~ +600°C |
| 0x0E | Type J TC, -210 ~ +760°C | 0x28 | Nickel 120, -80 ~ +100°C |
| 0x0F | Type K TC, -210 ~ +1372°C | 0x29 | Nickel 120, 0 ~ +100°C |
| 0x10 | Type T TC, -270 ~ +400°C | 0x2A | Pt 1000, $\alpha=.00392$, -200 ~ +600°C |
| 0x11 | Type E TC, -270 ~ +1000°C | 0x2B | Cu 100, $\alpha=.00421$, -20 ~ +150°C |
| 0x12 | Type R TC, 0 ~ +1768°C | 0x2C | Cu 100, $\alpha=.00427$, 0 ~ +200°C |
| 0x13 | Type S TC, 0 ~ +1768°C | 0x2D | Cu 1000, $\alpha=.00421$, -20 ~ +150°C |
| 0x14 | Type B TC, 0 ~ +1820°C | 0x2E | Pt 100, $\alpha=.00385$, -200 ~ +200°C |
| 0x15 | Type N TC, -270 ~ +1300°C | 0x2F | Pt 100, $\alpha=.003916$, -200 ~ +200°C |
| 0x16 | Type C TC, 0 ~ +2320°C | | |

A.2 Analog Output Type Code

| Code | Input Type |
|------|---------------|
| 0x30 | 0 ~ +20 mA |
| 0x31 | 4 ~ +20 mA |
| 0x32 | 0 V ~ +10 V |
| 0x33 | -10 V ~ +10 V |
| 0x34 | 0 V ~ +5 V |
| 0x35 | -5 V ~ +5 V |

A.3 Pulse Input Type Code

| Code | Input Type |
|------|-----------------------------|
| 0x50 | Up counter |
| 0x51 | Frequency |
| 0x52 | Counter with battery backup |
| 0x53 | Encoder |
| 0x54 | Up/Down counter |
| 0x55 | Pulse/Direction counter |
| 0x56 | AB phase |

A.4 Channel Status

| Code | Input Type |
|------|-------------------------|
| 0x00 | Good |
| 0x01 | Over Range / Overflow |
| 0x02 | Under Range / Underflow |
| 0x03 | Open |
| 0x04 | Close |
| 0x05 | Type Not Supported |

Appendix B

B.1 Error Codes

The error codes are divided into three parts, device, DEV-library and IO-library. Each part means different error code returned by device, DEV-library and IO-library. The error codes are described in the table.

| Constant/Value | Description |
|--|---|
| ERR_NO_ERR 0x00000000, 0 | The operation completed successfully. |
| ERR_DEV_ILLEGAL_FUNC 0x00000001, 1 | The function is invalid. |
| ERR_DEV_ILLEGAL_INDEX 0x00000002, 2 | The index is invalid. |
| ERR_DEV_ILLEGAL_LENGTH 0x00000003, 3 | The length is invalid. |
| ERR_DEV_ILLEGAL_PARAMETER 0x00000004, 4 | The parameter is invalid. |
| ERR_DEV_ILLEGAL_MAPTABSIZ 0x00000005, 5 | The size of mapping table is invalid. |
| ERR_DEV_ILLEGAL_MAPTABINDEX 0x00000006, 6 | The index in mapping table is invalid. |
| ERR_DEV_READONLY 0x00000007, 7 | The index is read only. |
| ERR_DEV_WRITEONLY 0x00000008, 8 | The index is written only. |
| ERR_DEV_BUFFERFULL 0x00000009, 9 | The buffer in transceiver is full. |
| ERR_DEV_LTTIMEOUT 0x0000000A, 10 | The operation of large transfer has timeout. |
| ERR_DEV_LTMODEFAIL 0x0000000B, 11 | The current mode is not in large transfer mode. |
| ERR_DEV_LTPKGLOST | The large transfer packet is lost. |

| | |
|--|--|
| 0x0000000C, 12 | |
| ERR_DEV_LTINDEXNOTMACH 0x0000000D, 13 | The offset index is not match while operating in large transfer. |
| ERR_DEV_LTNOTFINISH 0x0000000E, 14 | Another large transfer is operating. |
| ERR_DEV_DO_RELATED_ERR 0x00004000~0x000047FFF | The digital output related error in this region. |
| ERR_DEV_DI_RELATED_ERR 0x00004800~0x00004FFF | The digital input related error in this region. |
| ERR_DEV_AO_RELATED_ERR 0x00005000~0x000057FF | The analog output related error in this region. |
| ERR_DEV_AI_RELATED_ERR 0x00005800~0x00005FFF | The analog input related error in this region. |
| ERR_DEV_PO_RELATED_ERR 0x00006000~0x000067FF | The pulse output related error in this region. |
| ERR_DEV_PI_RELATED_ERR 0x00006800~0x00006FFF | The pulse input related error in this region. |
| ERR_USBDEV_INVALID_DEV 0x00010000, 65536 | The handle of device is invalid. |
| ERR_USBDEV_DEV_OPENED 0x00010001, 65537 | The device has been opened by class library. |
| ERR_USBDEV_DEVNOTEXISTS 0x00010002, 65538 | The class library cannot find the device. |
| ERR_USBDEV_GETDEVINFO 0x00010003, 65539 | An error was made to scan device. |
| ERR_USBDEV_ERROR_PKTSIZE 0x00010004, 65540 | The packet size is invalid. |
| ERR_USBDEV_ERROR_WRITEFILE 0x00010004, 65541 | An error occurs while writing packet to module. |
| ERR_USBBIO_COMM_TIMEOUT 0x00010100, 65792 | The communication between computer and device has been timeout. |
| ERR_USBBIO_DEV_OPENED 0x00010101, 65793 | The device has been opened by class library. |
| ERR_USBBIO_DEV_NOTOPEN 0x00010102, 65794 | The device has not opened for operating. |
| ERR_USBBIO_INVALID_RESP 0x00010103, 65795 | The data returned by device is invalid. |

| | |
|--|---|
| ERR_USBIO_IO_NOTSUPPORT 0x00010104, 65796 | The method is not supported. |
| ERR_USBIO_PARA_ERROR 0x00010105, 65797 | The parameter of method is invalid. |
| ERR_USBIO_BULKVALUE_ERR 0x00010106, 65798 | An error occurs while getting bulk value. |
| ERR_USBIO_GETDEVINFO 0x00010107, 65799 | An error occur while getting device information while device opening procedure. |